




**SYSTEM WIRING DIAGRAMS**  
**Cooling Fan Circuit**  
 1993 Volvo 240

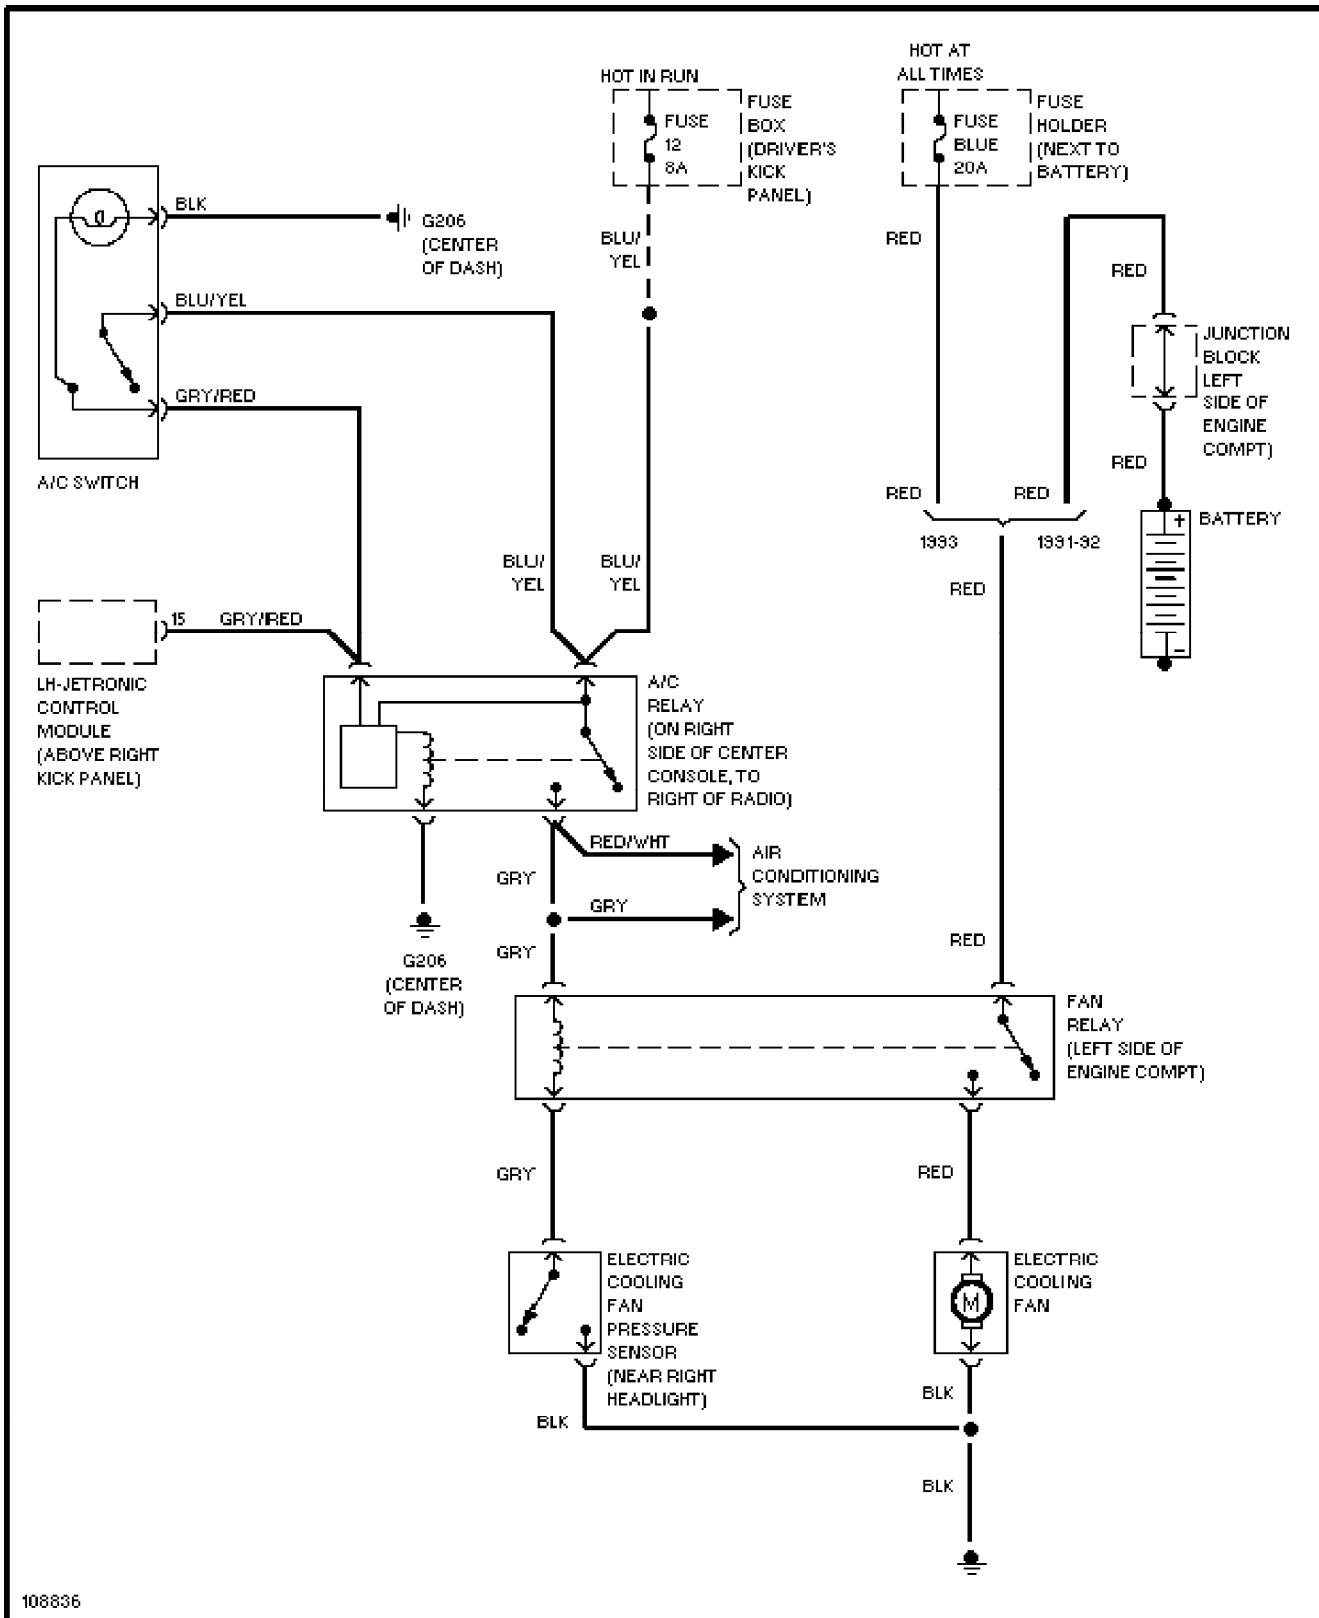


**SYSTEM WIRING DIAGRAMS**  
**Headlight Washer/Wiper Circuit**  
 1993 Volvo 240

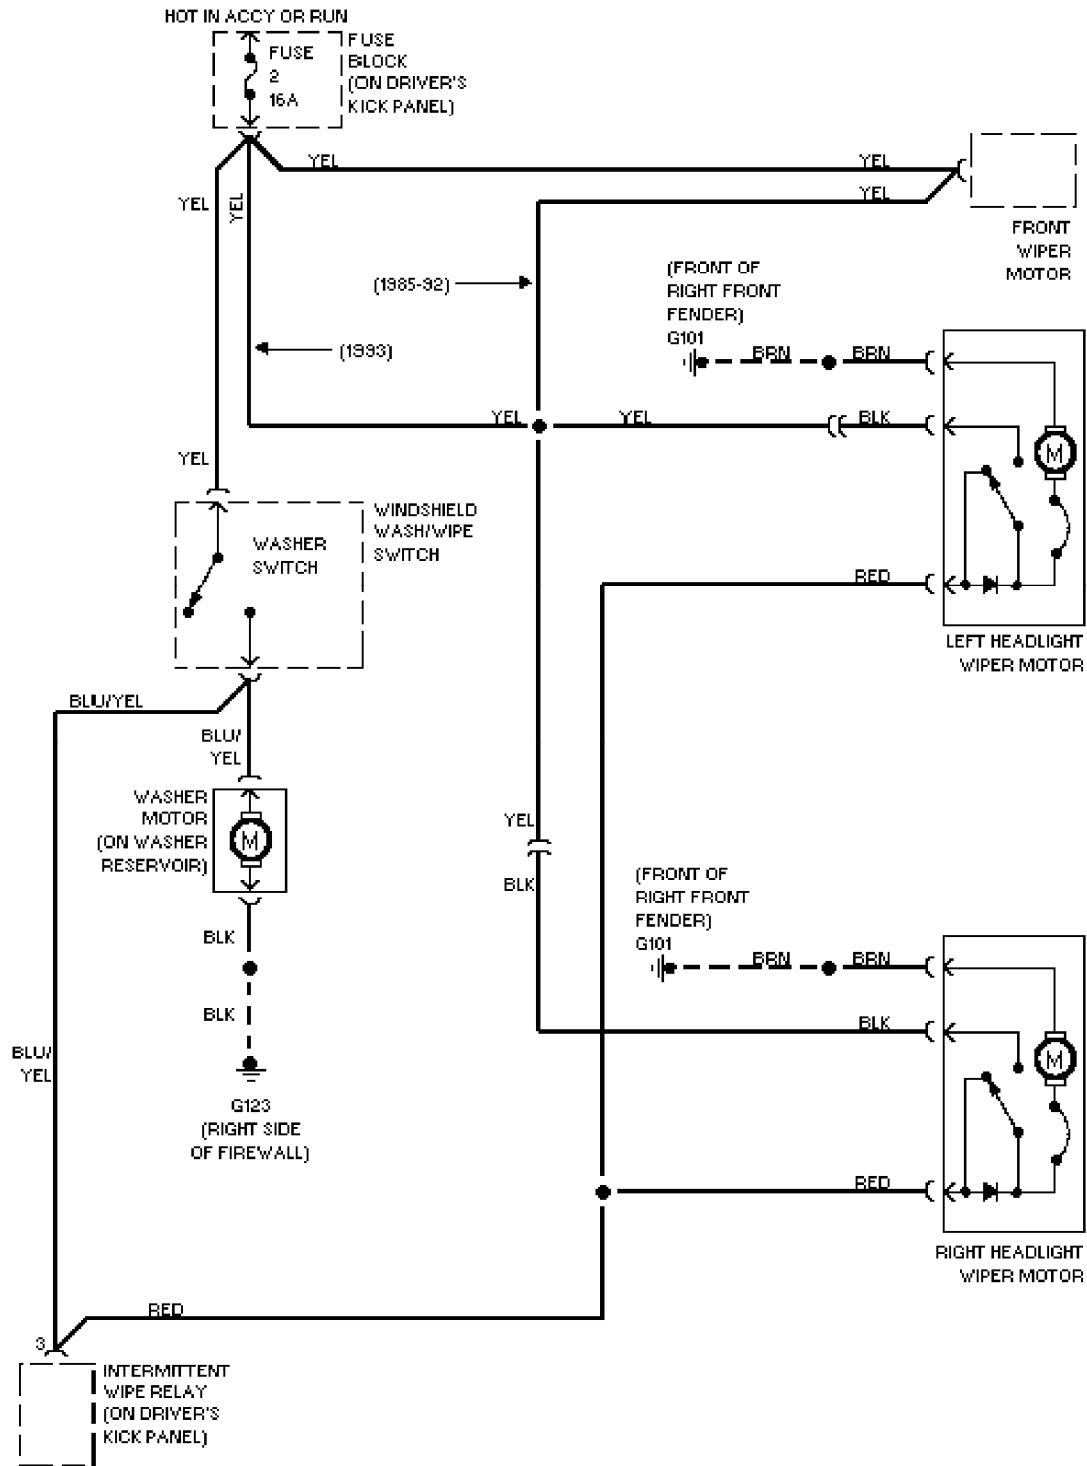

**SYSTEM WIRING DIAGRAMS**  
**Rear Washer/Wiper W/ Intermittent Relay Circuit**  
 1993 Volvo 240

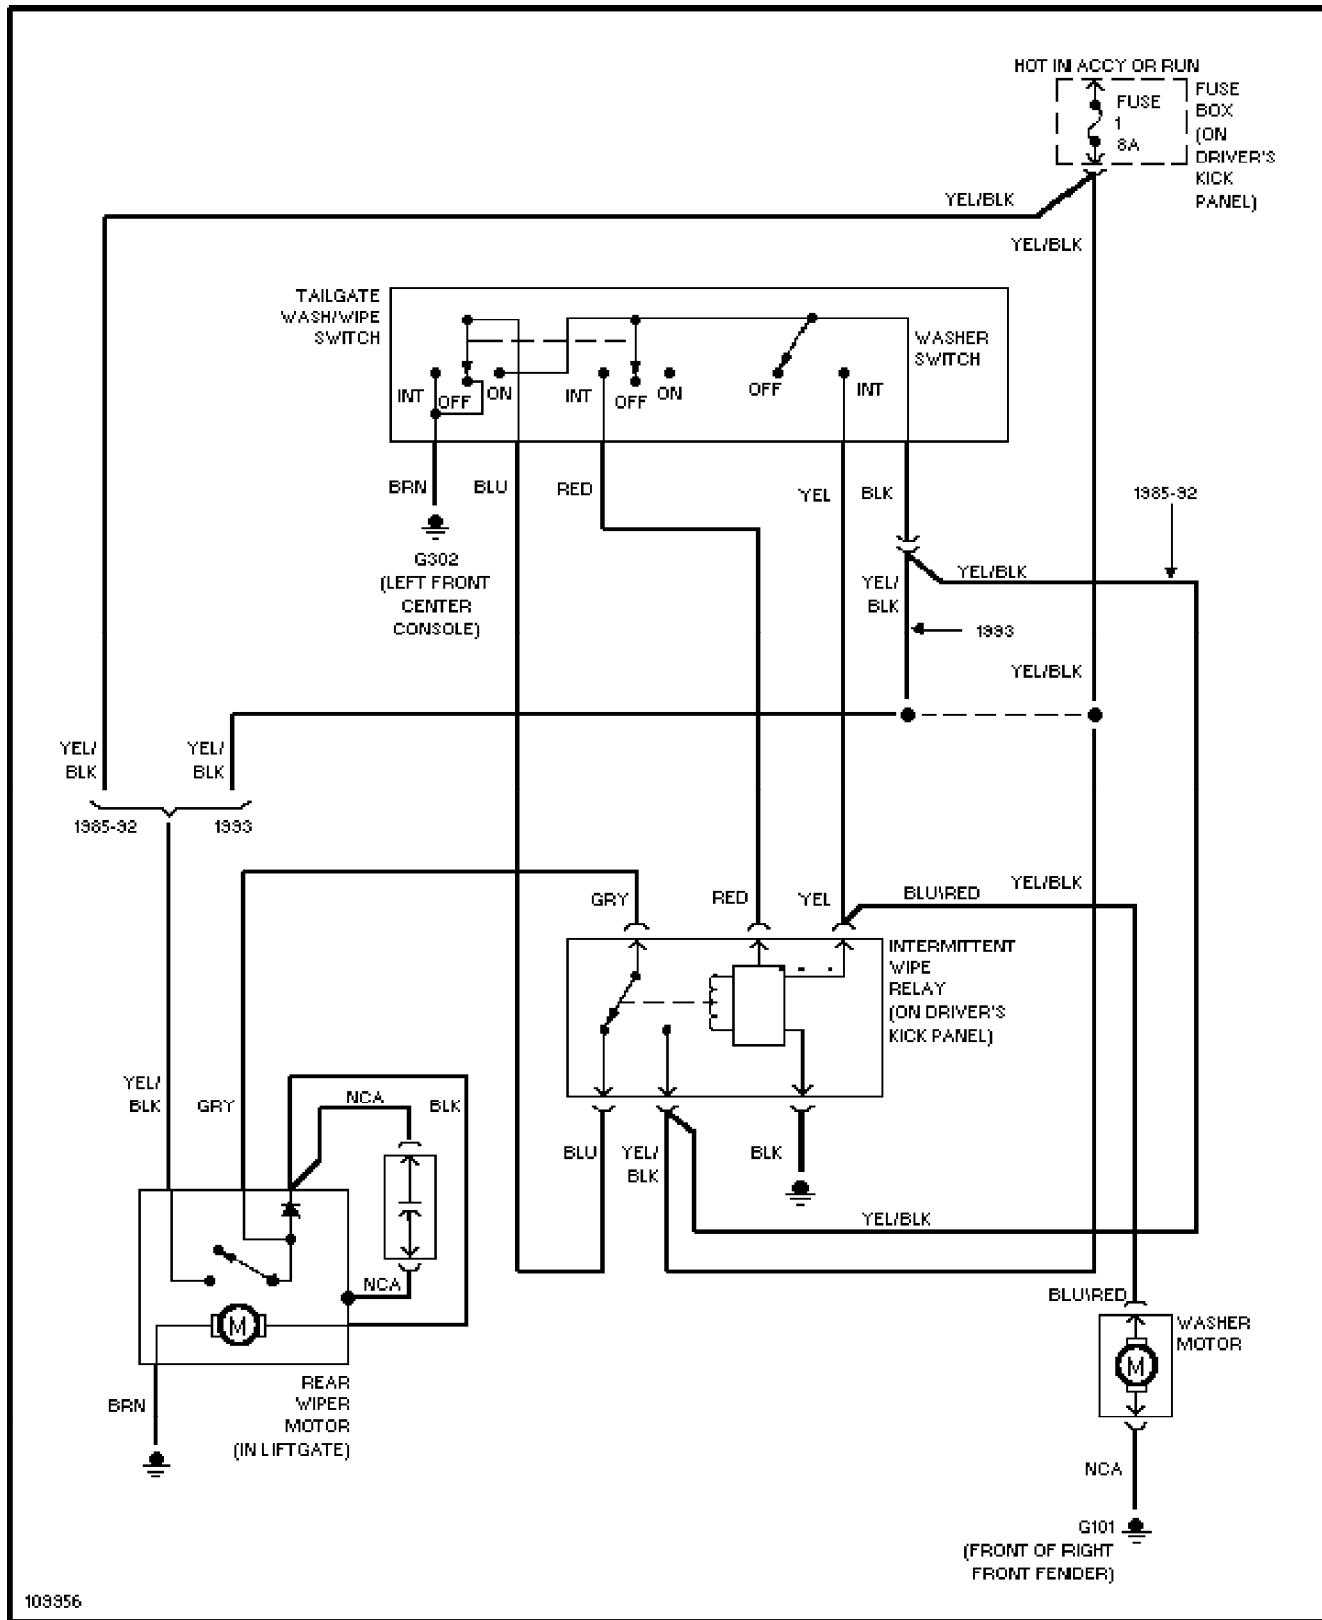


**SYSTEM WIRING DIAGRAMS**  
**Rear Washer/Wiper W/O Intermittent Relay Circuit**  
 1993 Volvo 240

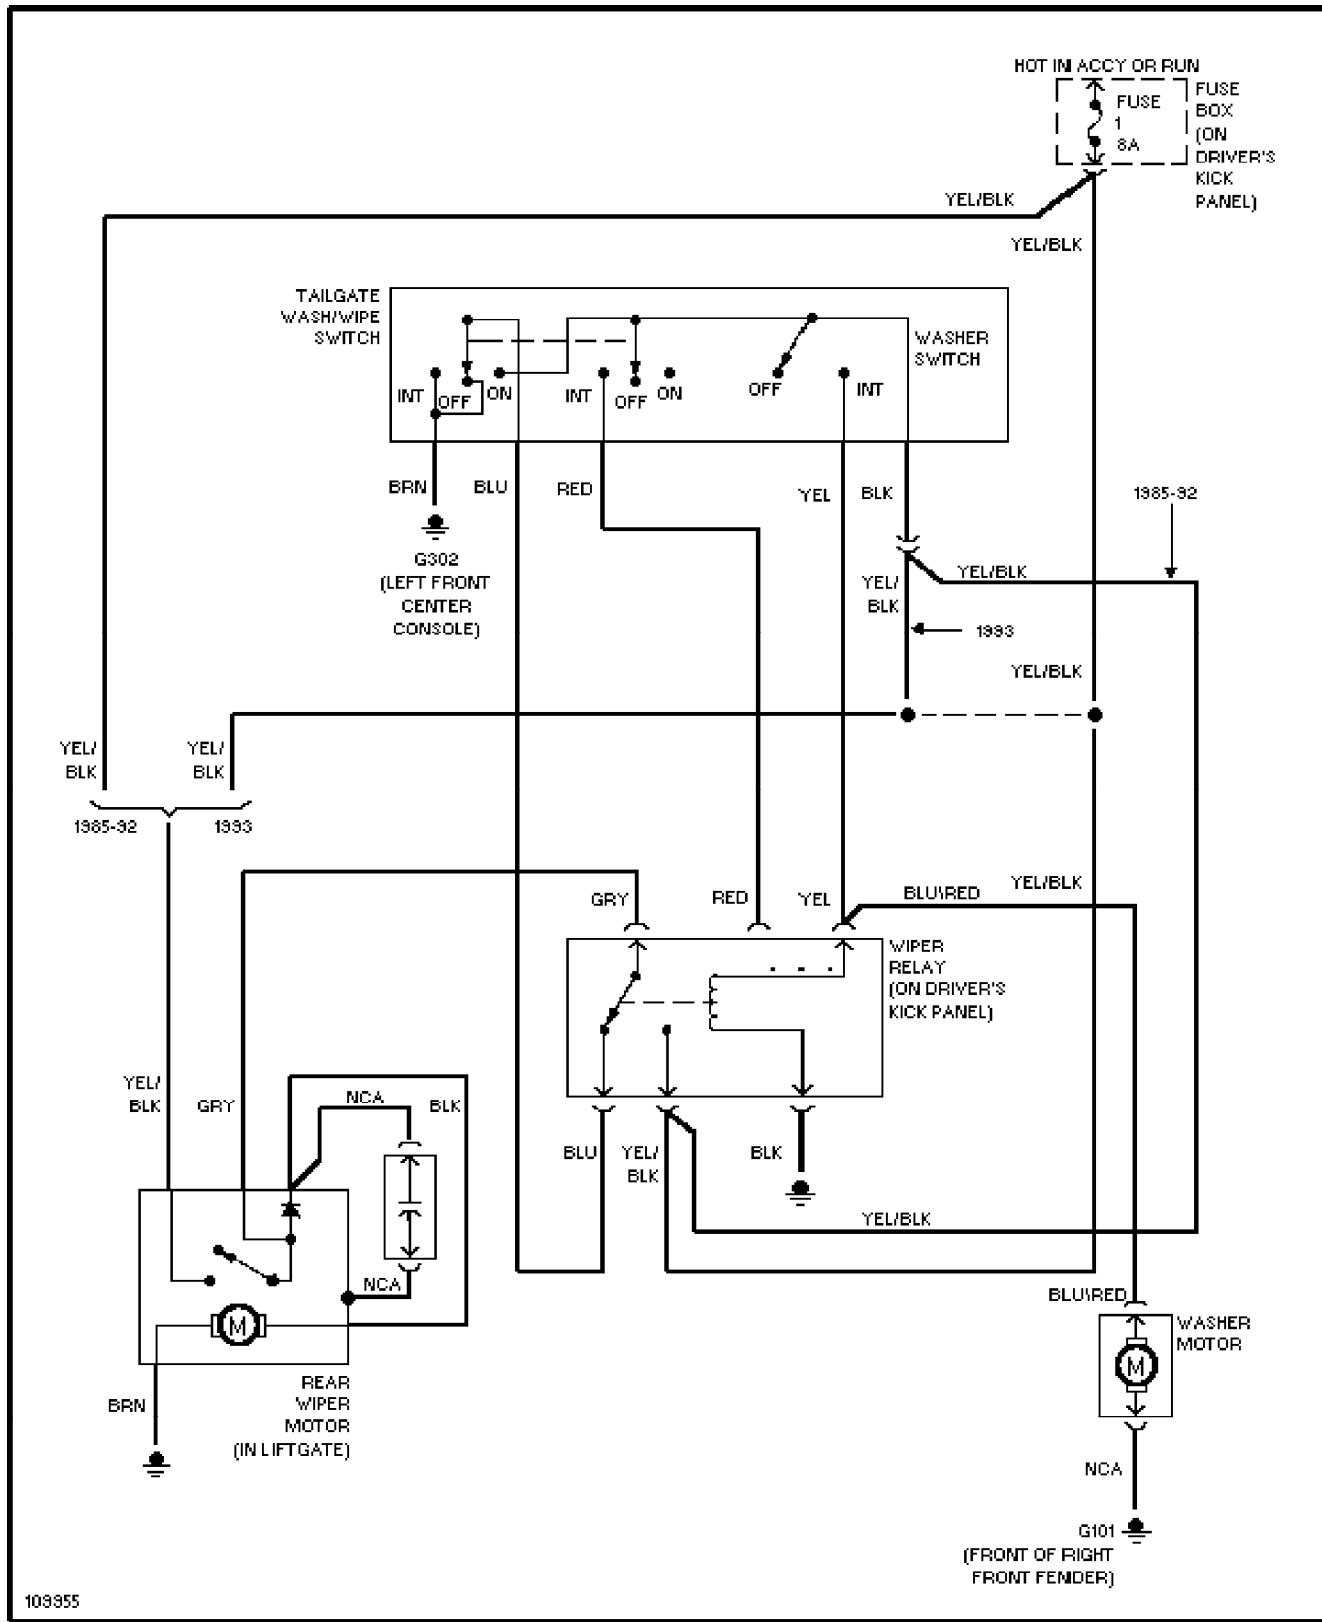


# SYSTEM WIRING DIAGRAMS

## Heated Mirrors Circuit

1993 Volvo 240

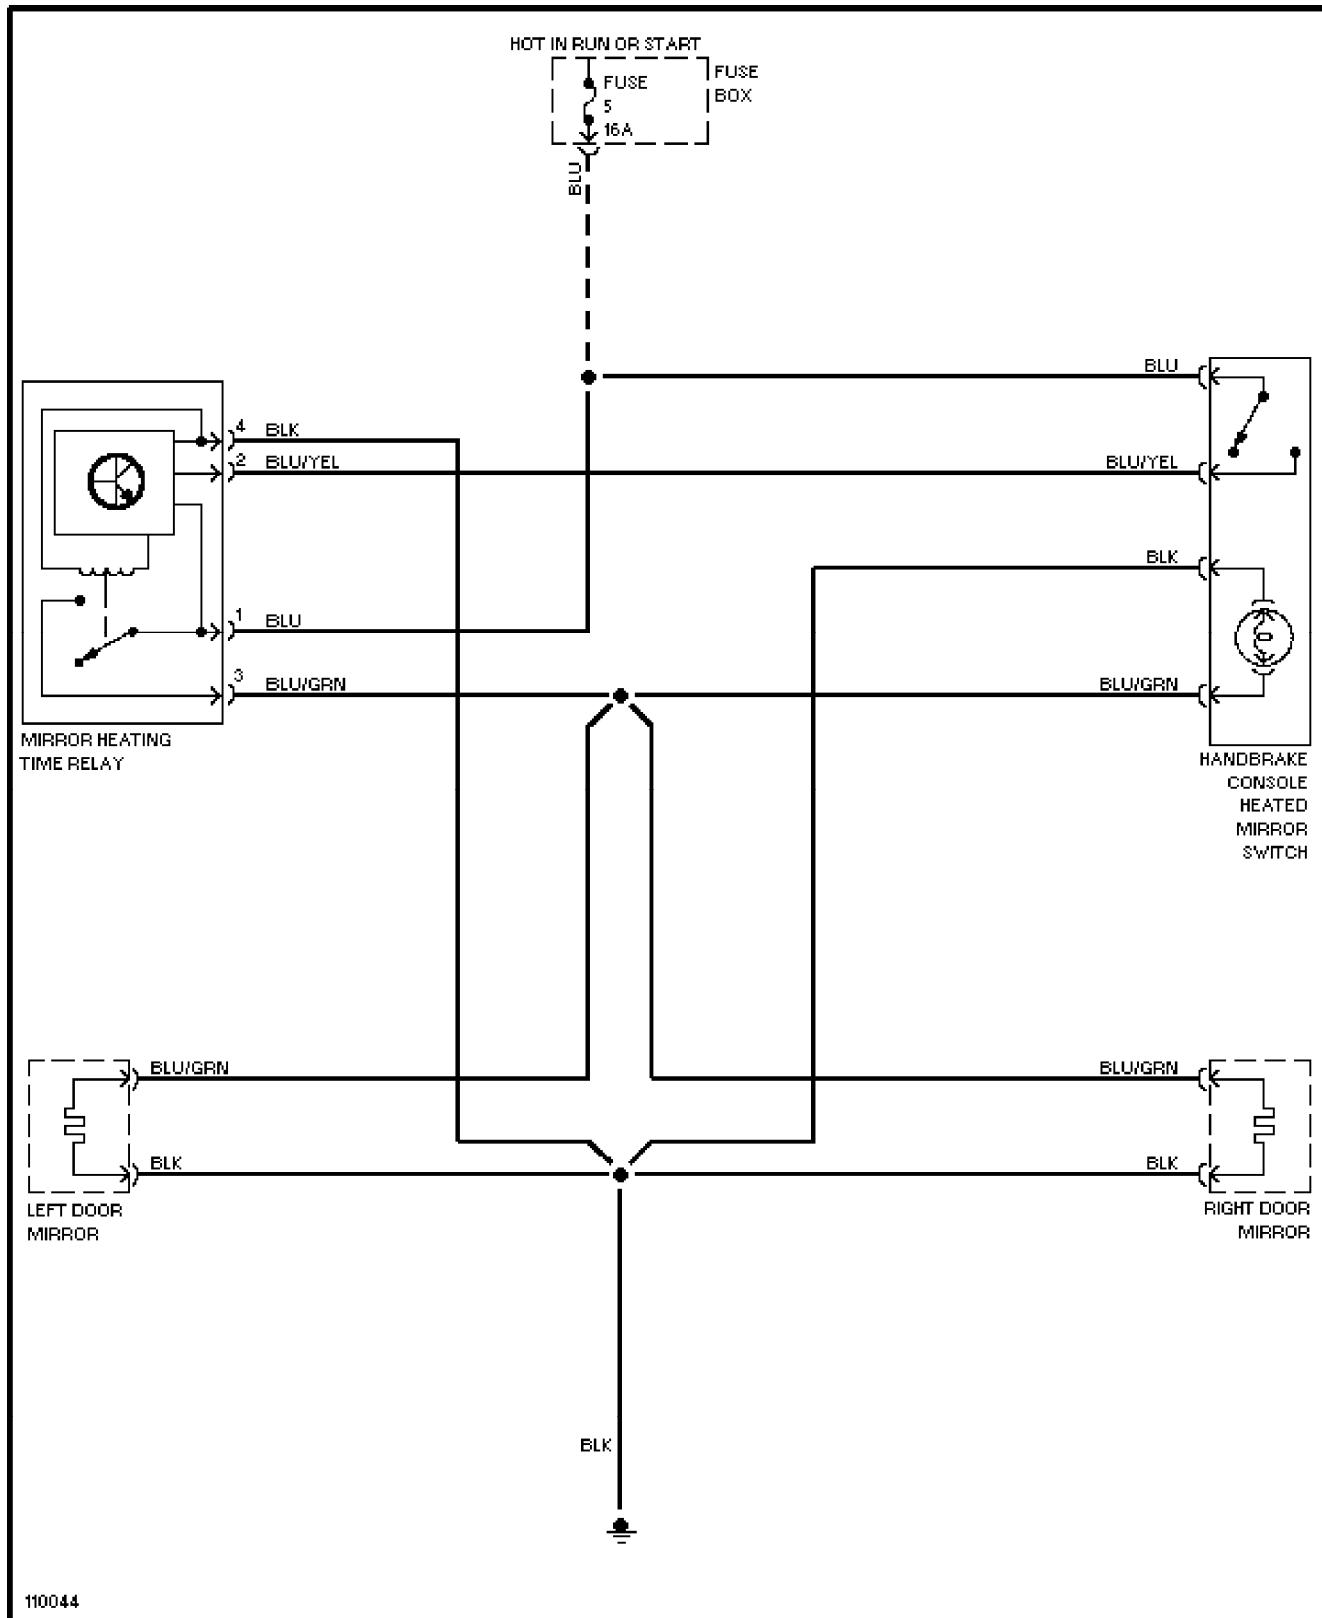


**SYSTEM WIRING DIAGRAMS**  
**Rear Defogger Circuit**  
1993 Volvo 240

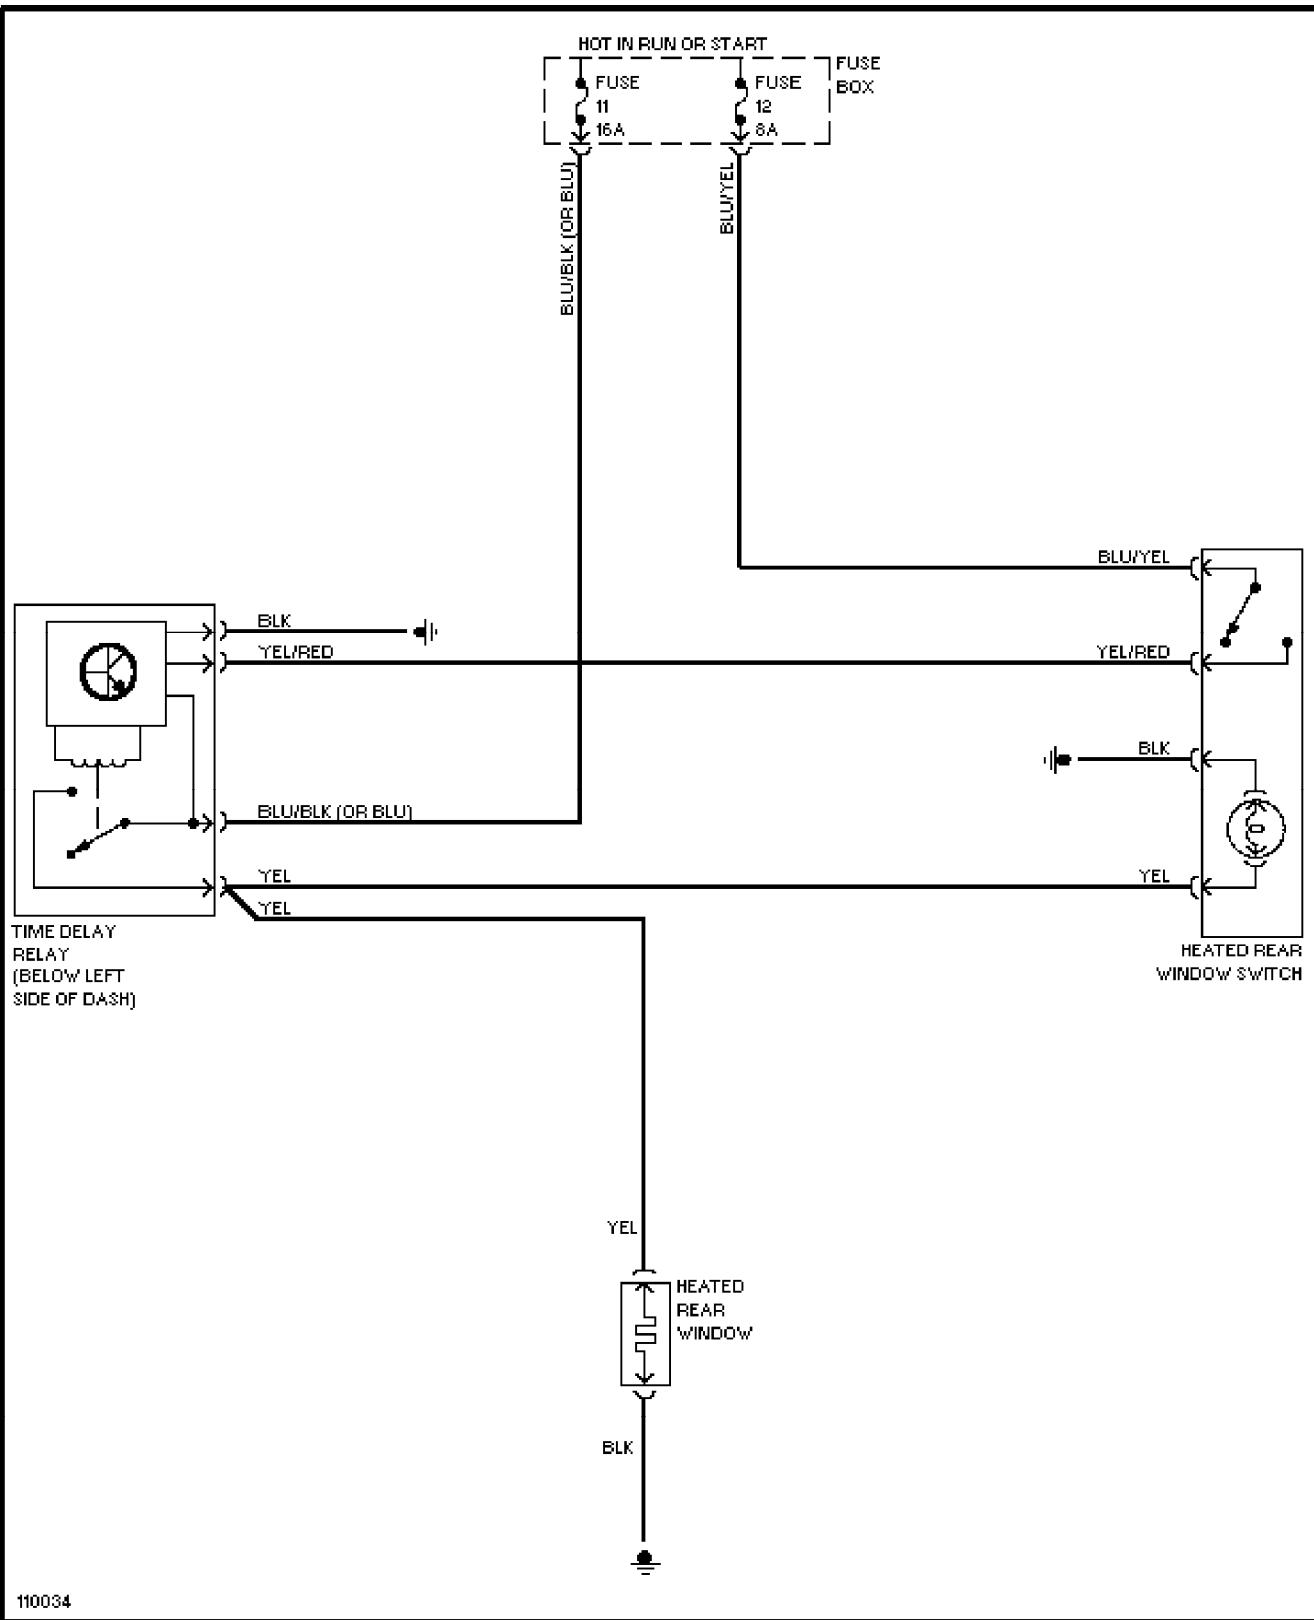

# SYSTEM WIRING DIAGRAMS

## Horn Circuit

1993 Volvo 240

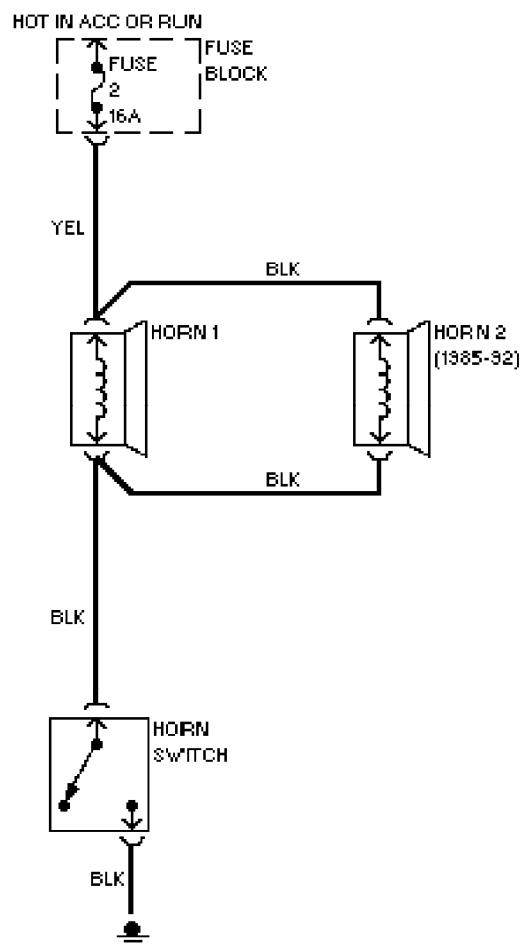


109960

# SYSTEM WIRING DIAGRAMS

## Power Antenna Circuit

1993 Volvo 240

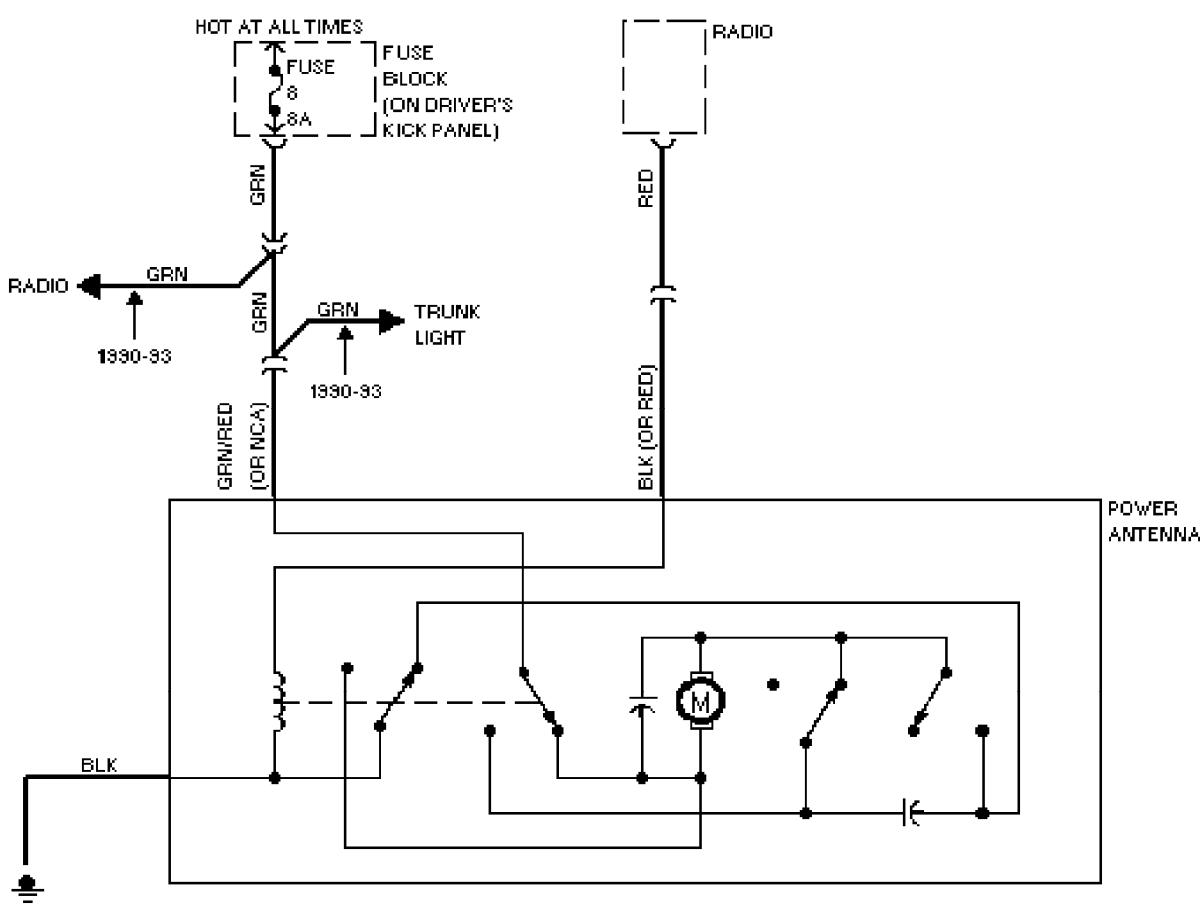


109958

# SYSTEM WIRING DIAGRAMS

## Power Door Lock Circuit


1993 Volvo 240

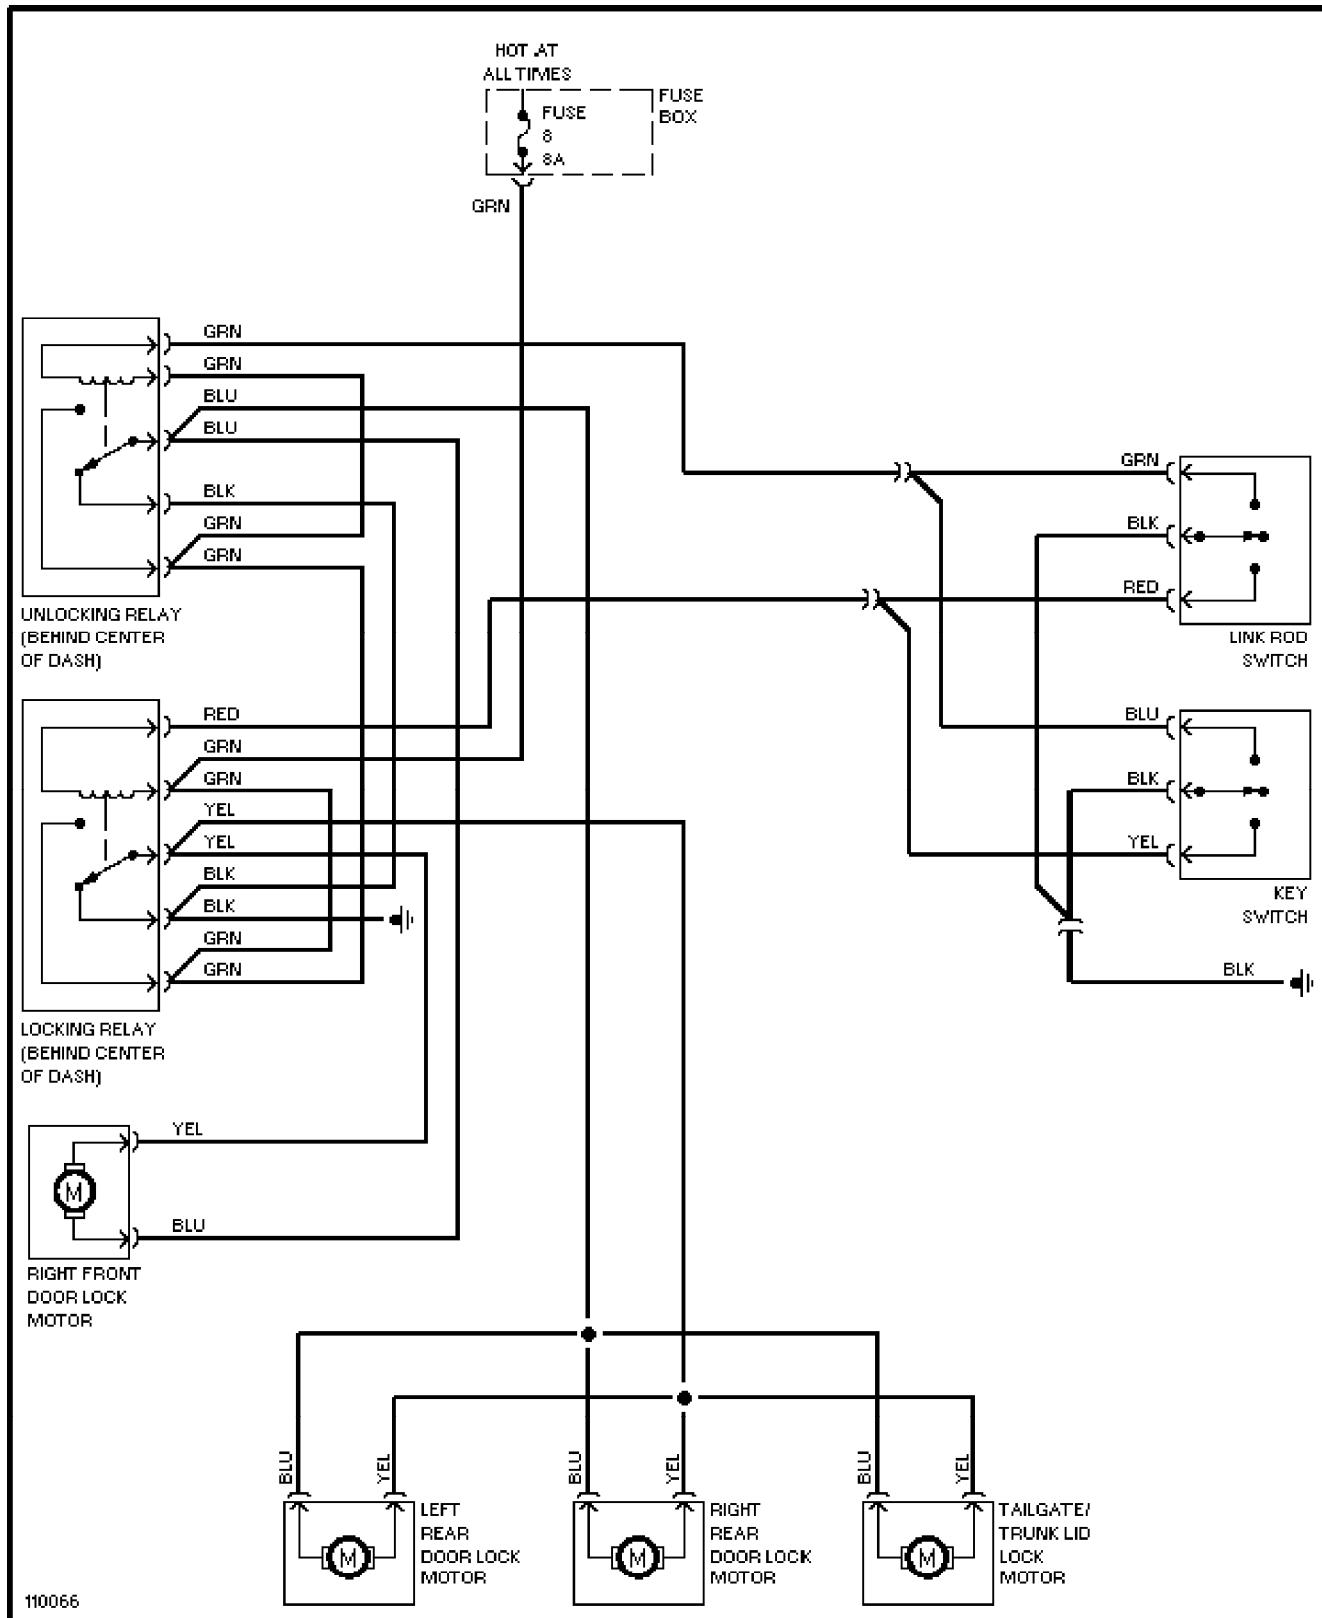

# SYSTEM WIRING DIAGRAMS

## Power Mirror Circuit


1993 Volvo 240

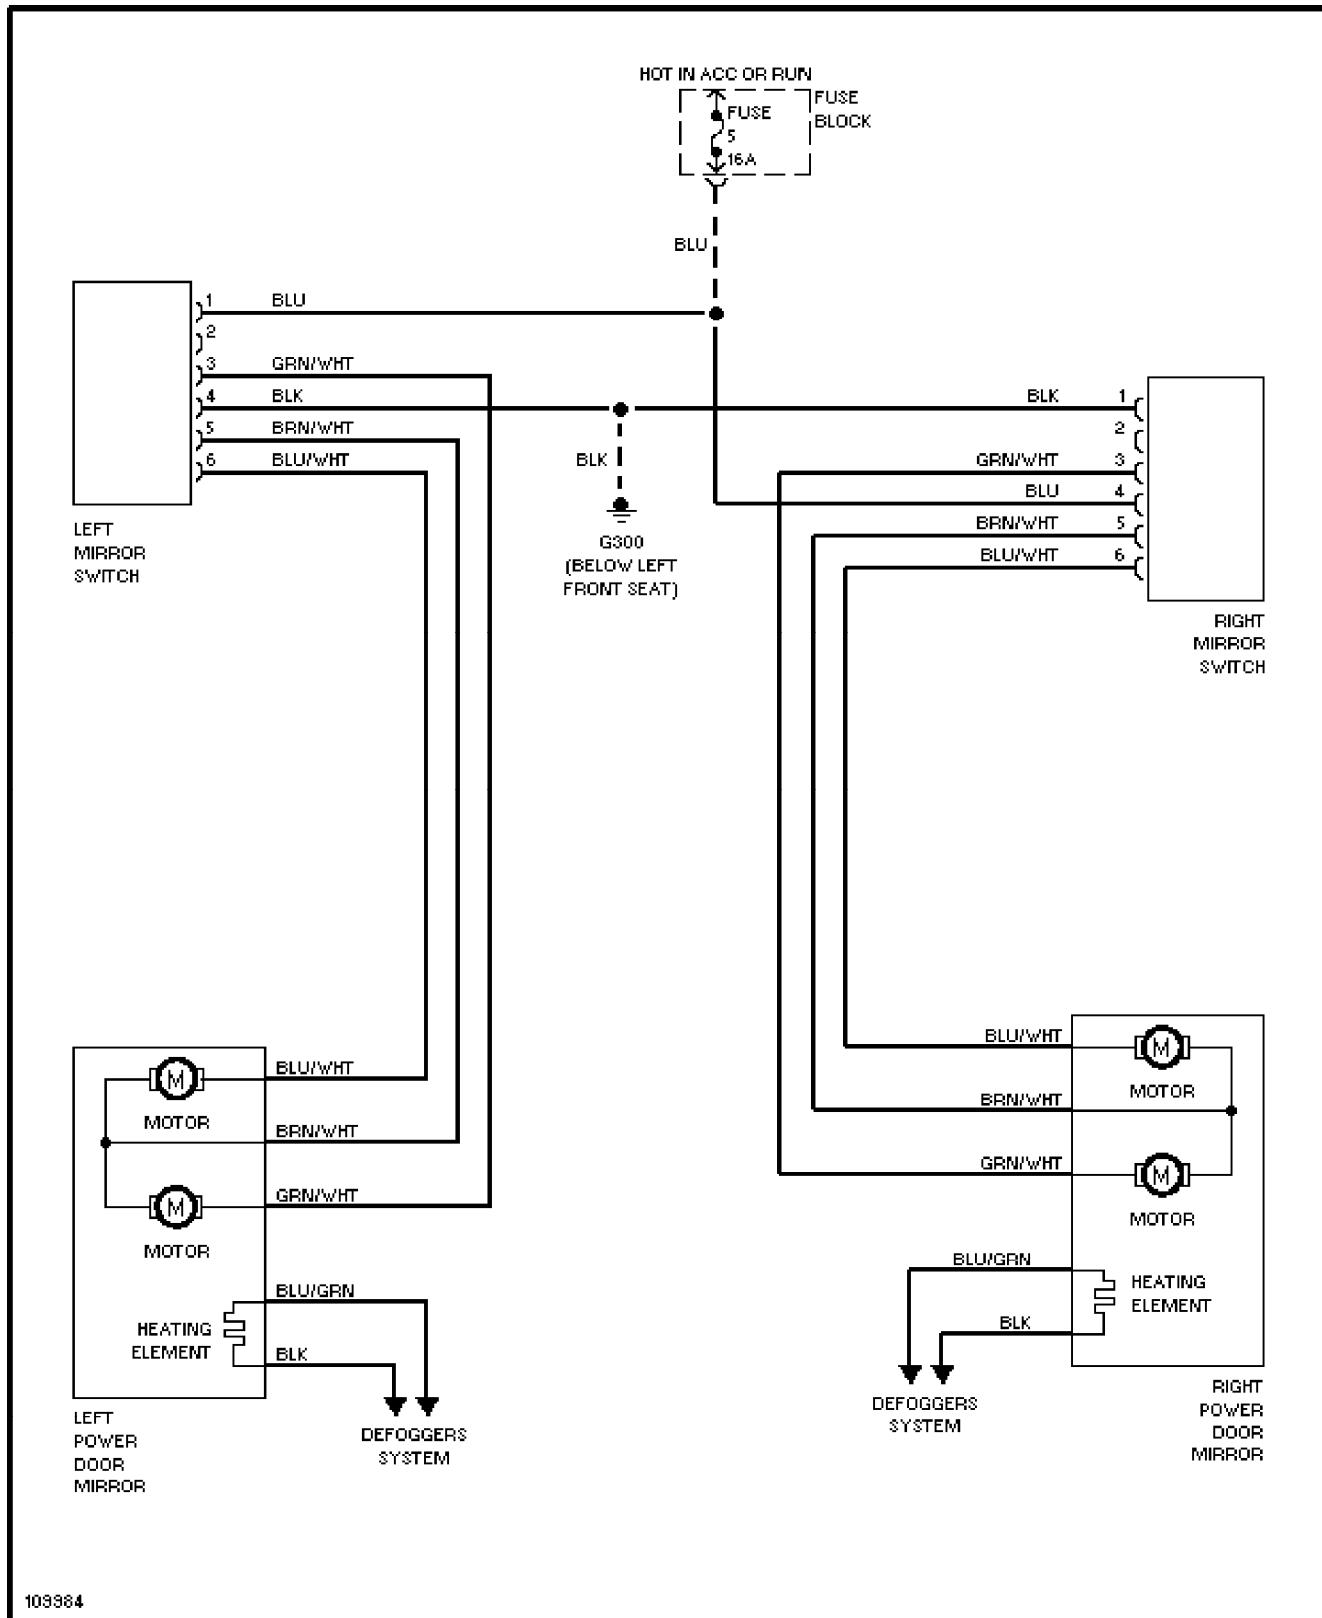

# SYSTEM WIRING DIAGRAMS

## Heated Seats Circuit


1993 Volvo 240

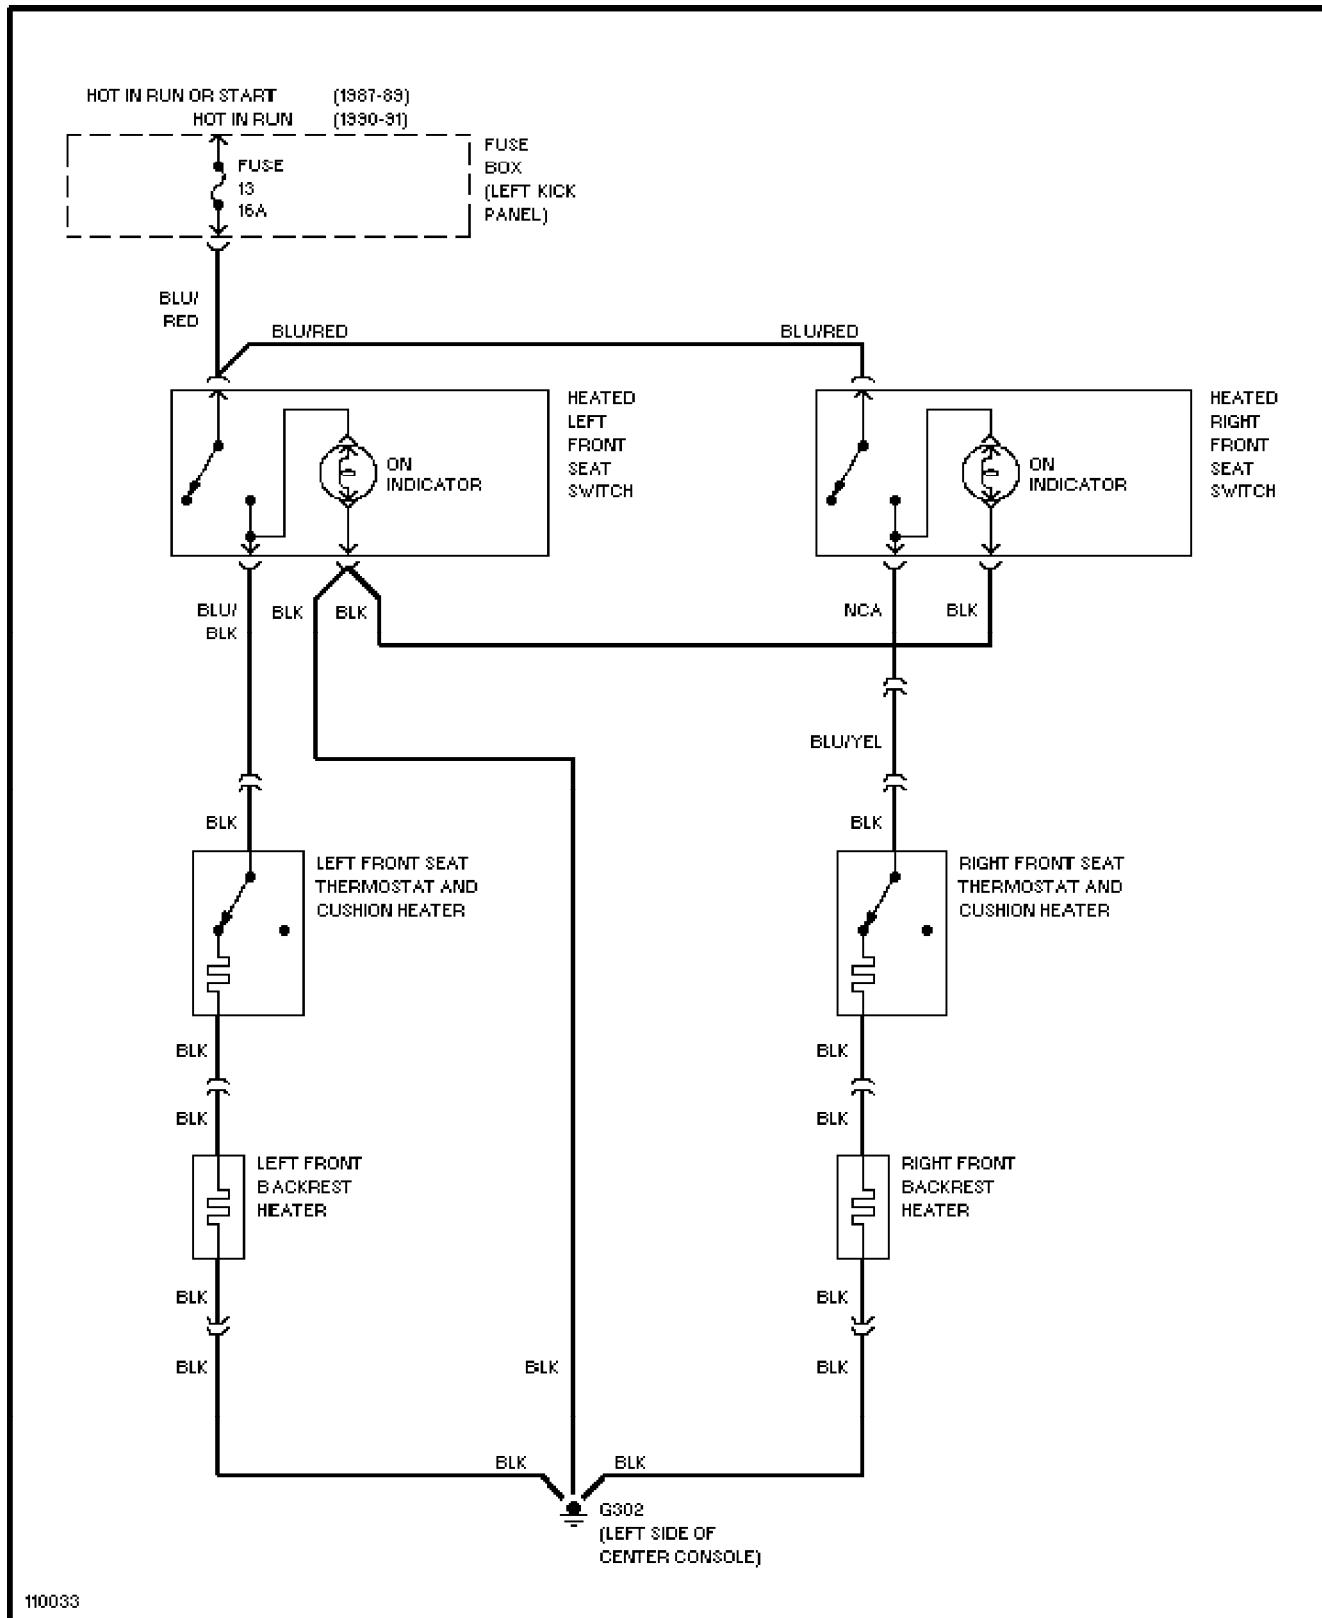

# SYSTEM WIRING DIAGRAMS

## Power Window Circuit


1993 Volvo 240

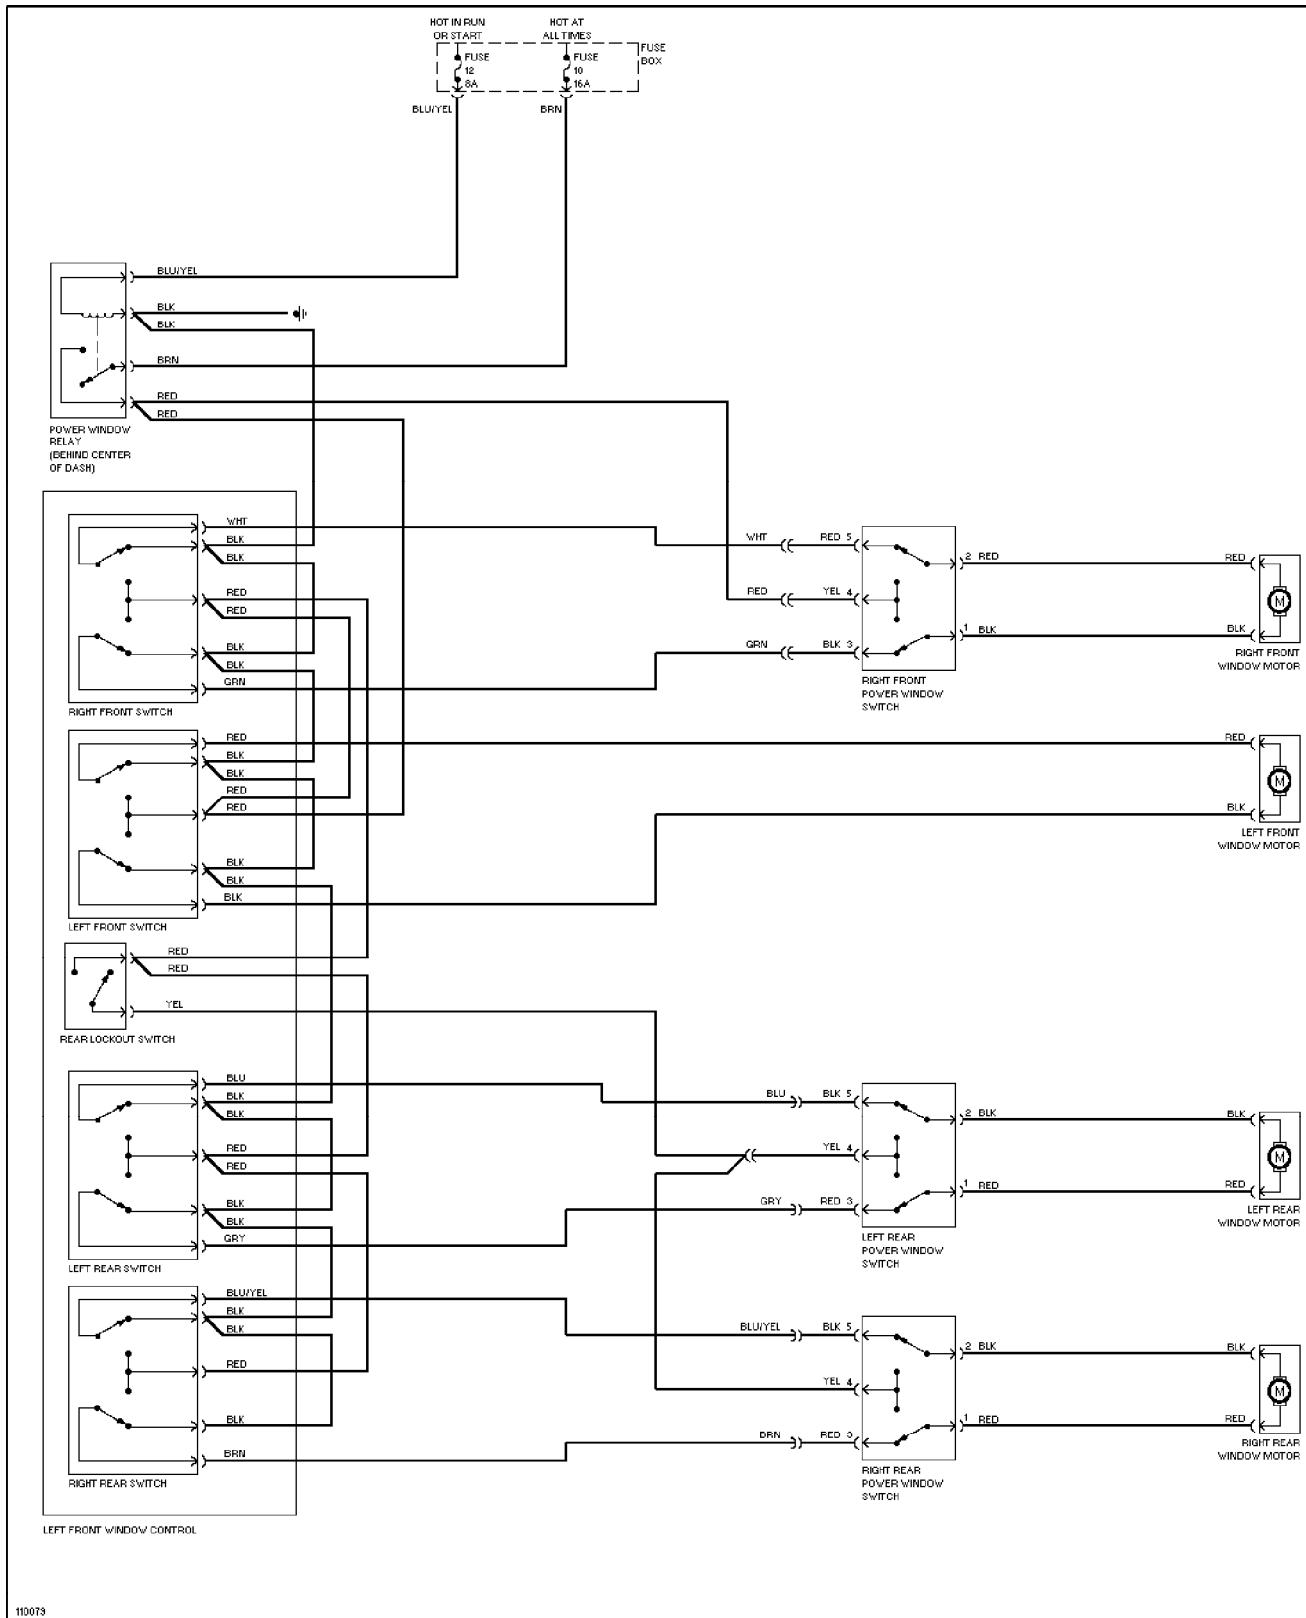


# SYSTEM WIRING DIAGRAMS

## Radio Circuits

1993 Volvo 240

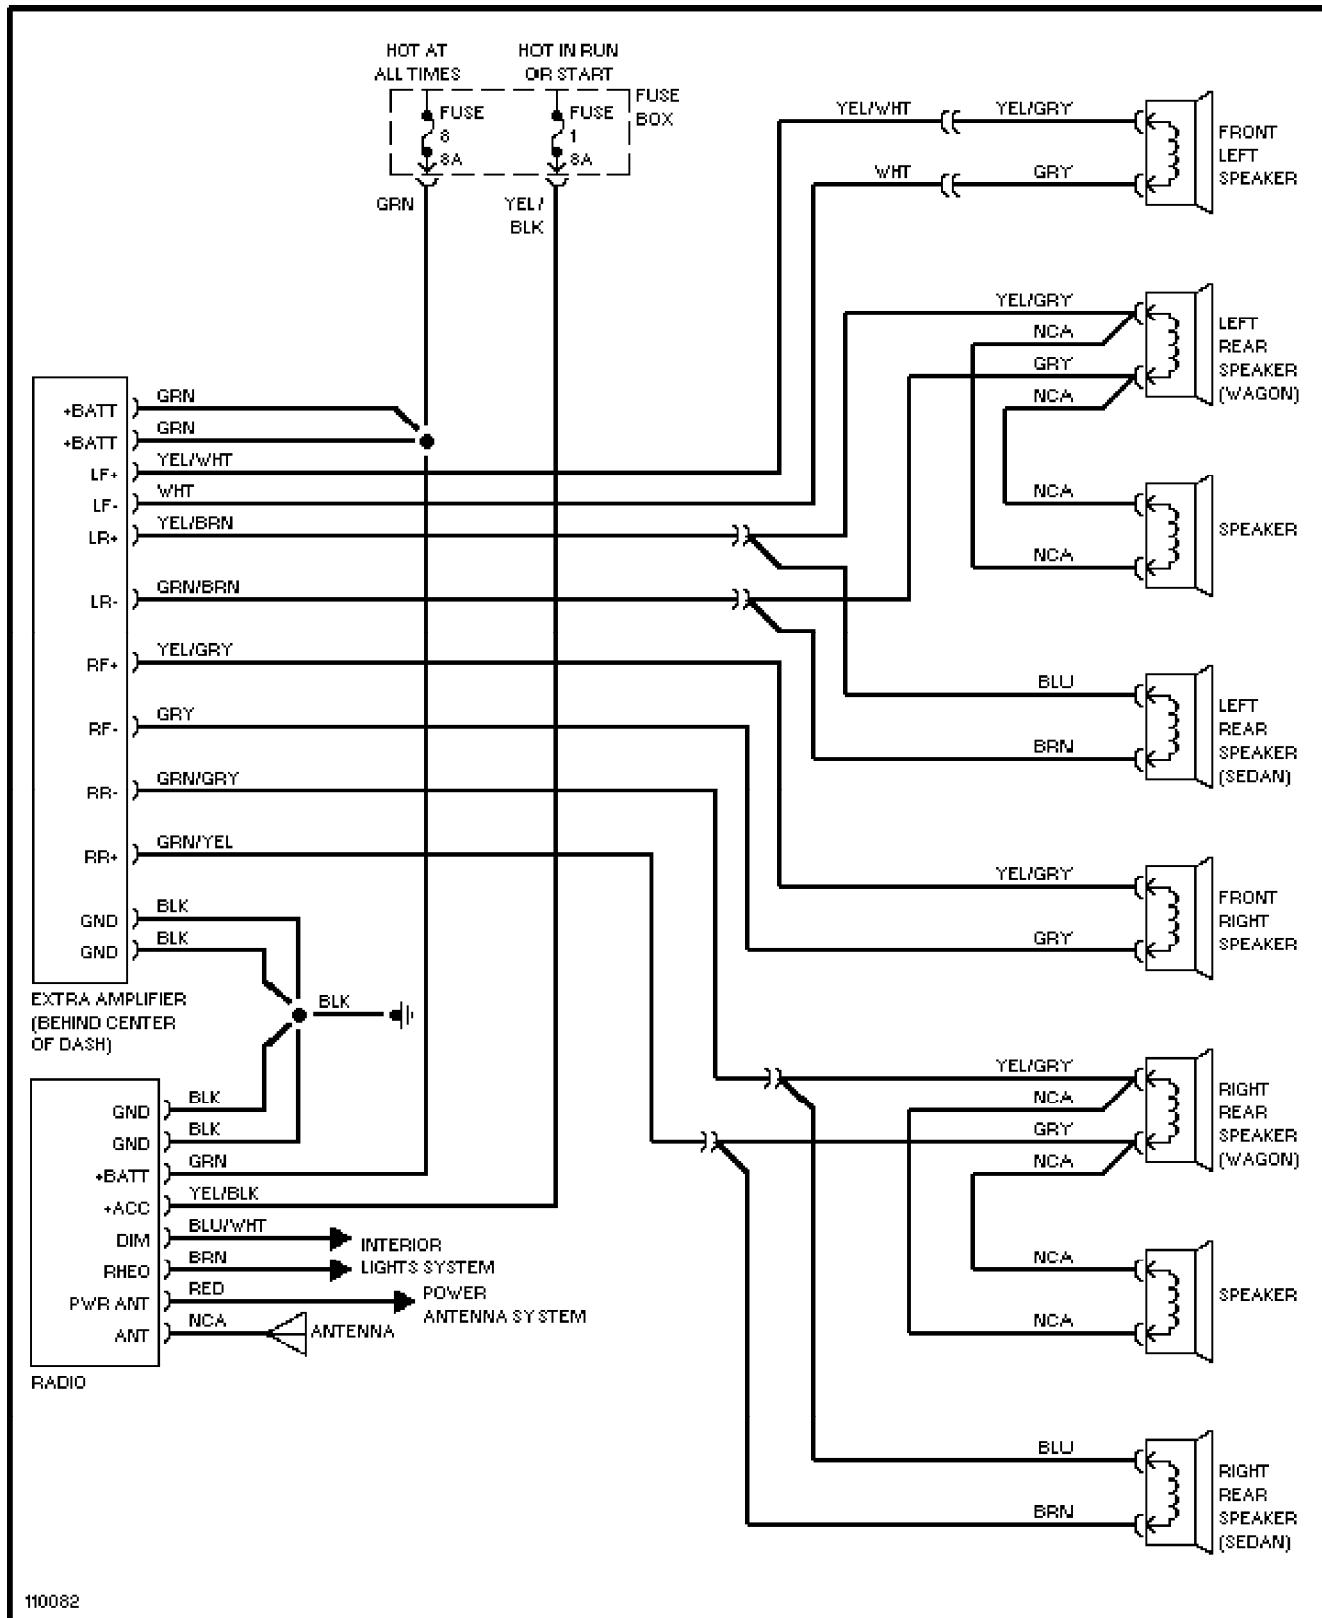


**SYSTEM WIRING DIAGRAMS**  
**Charging Circuit**  
1993 Volvo 240

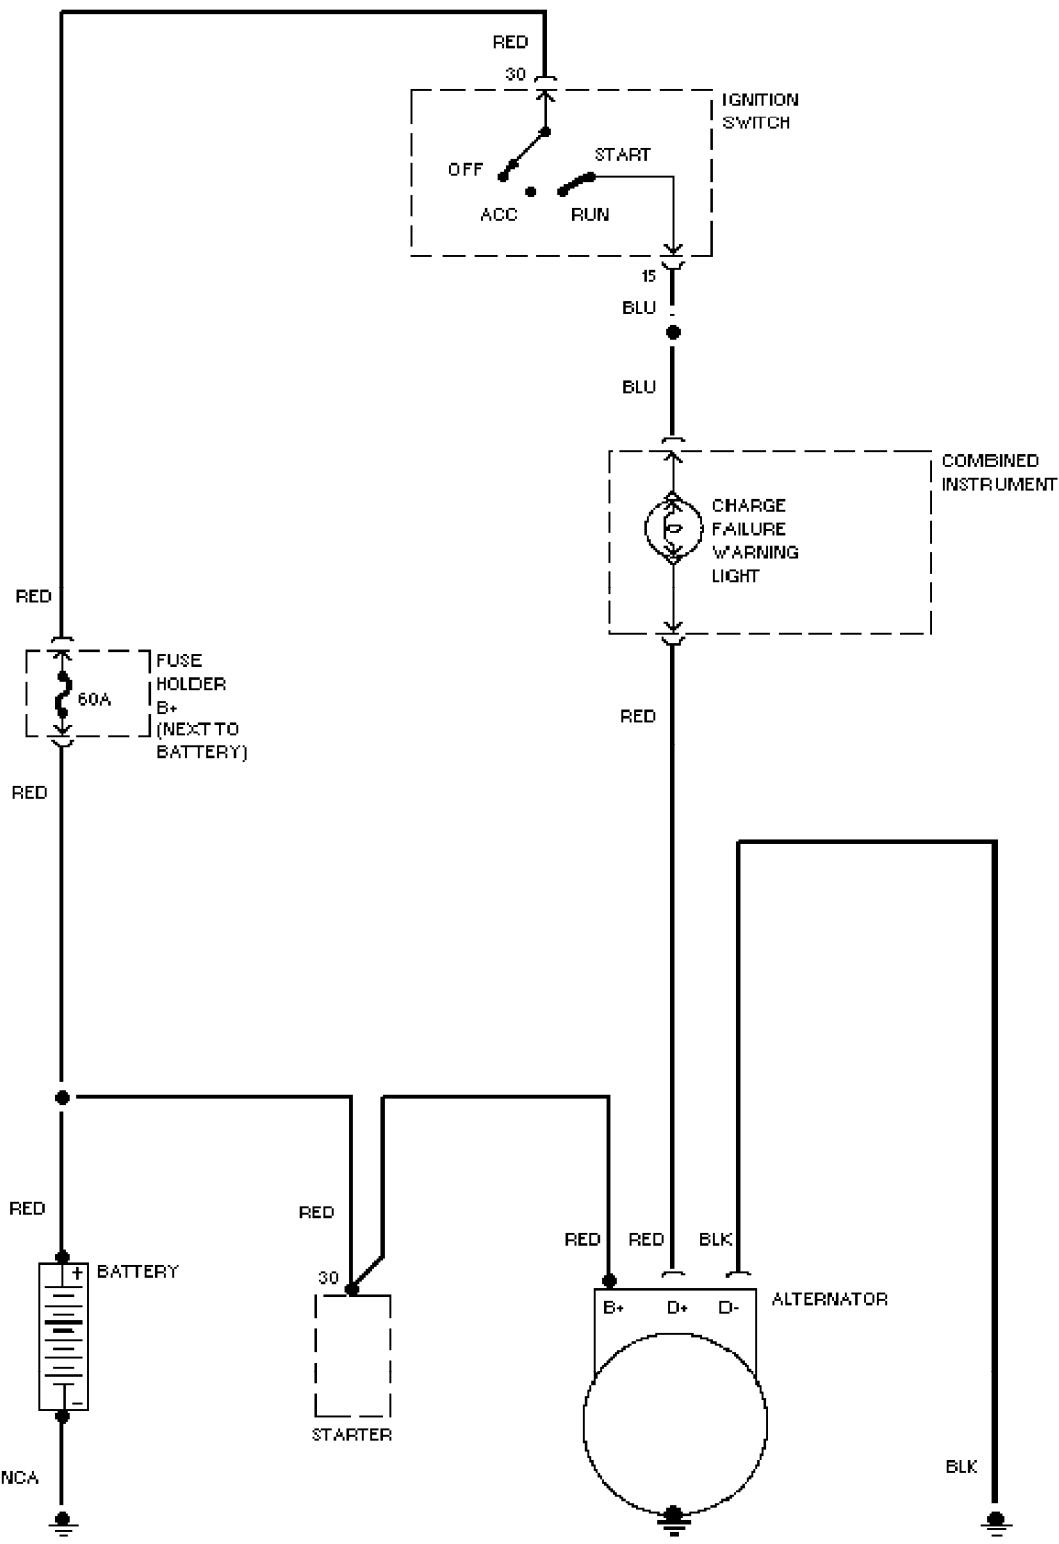

# SYSTEM WIRING DIAGRAMS

## Starting Circuit


1993 Volvo 240

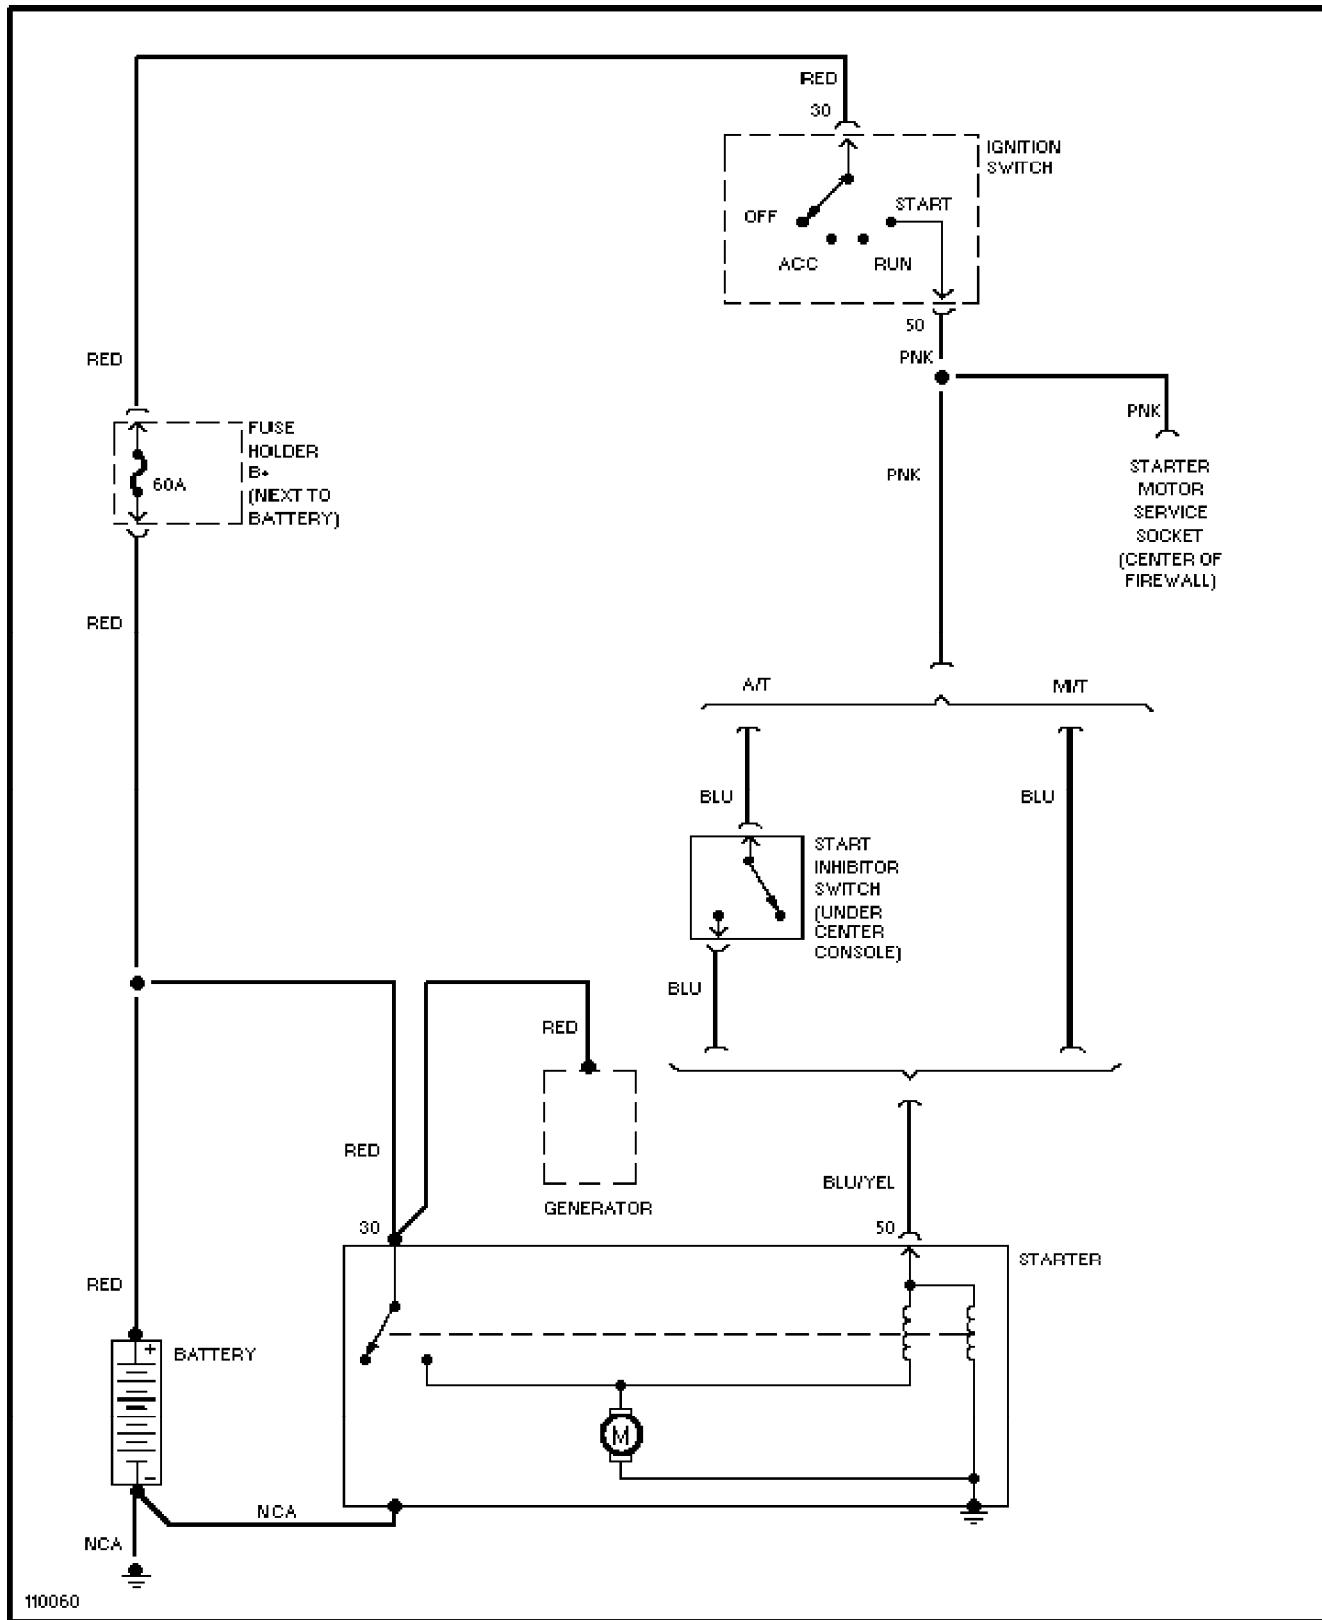


# SYSTEM WIRING DIAGRAMS

## Overdrive Circuit


1993 Volvo 240

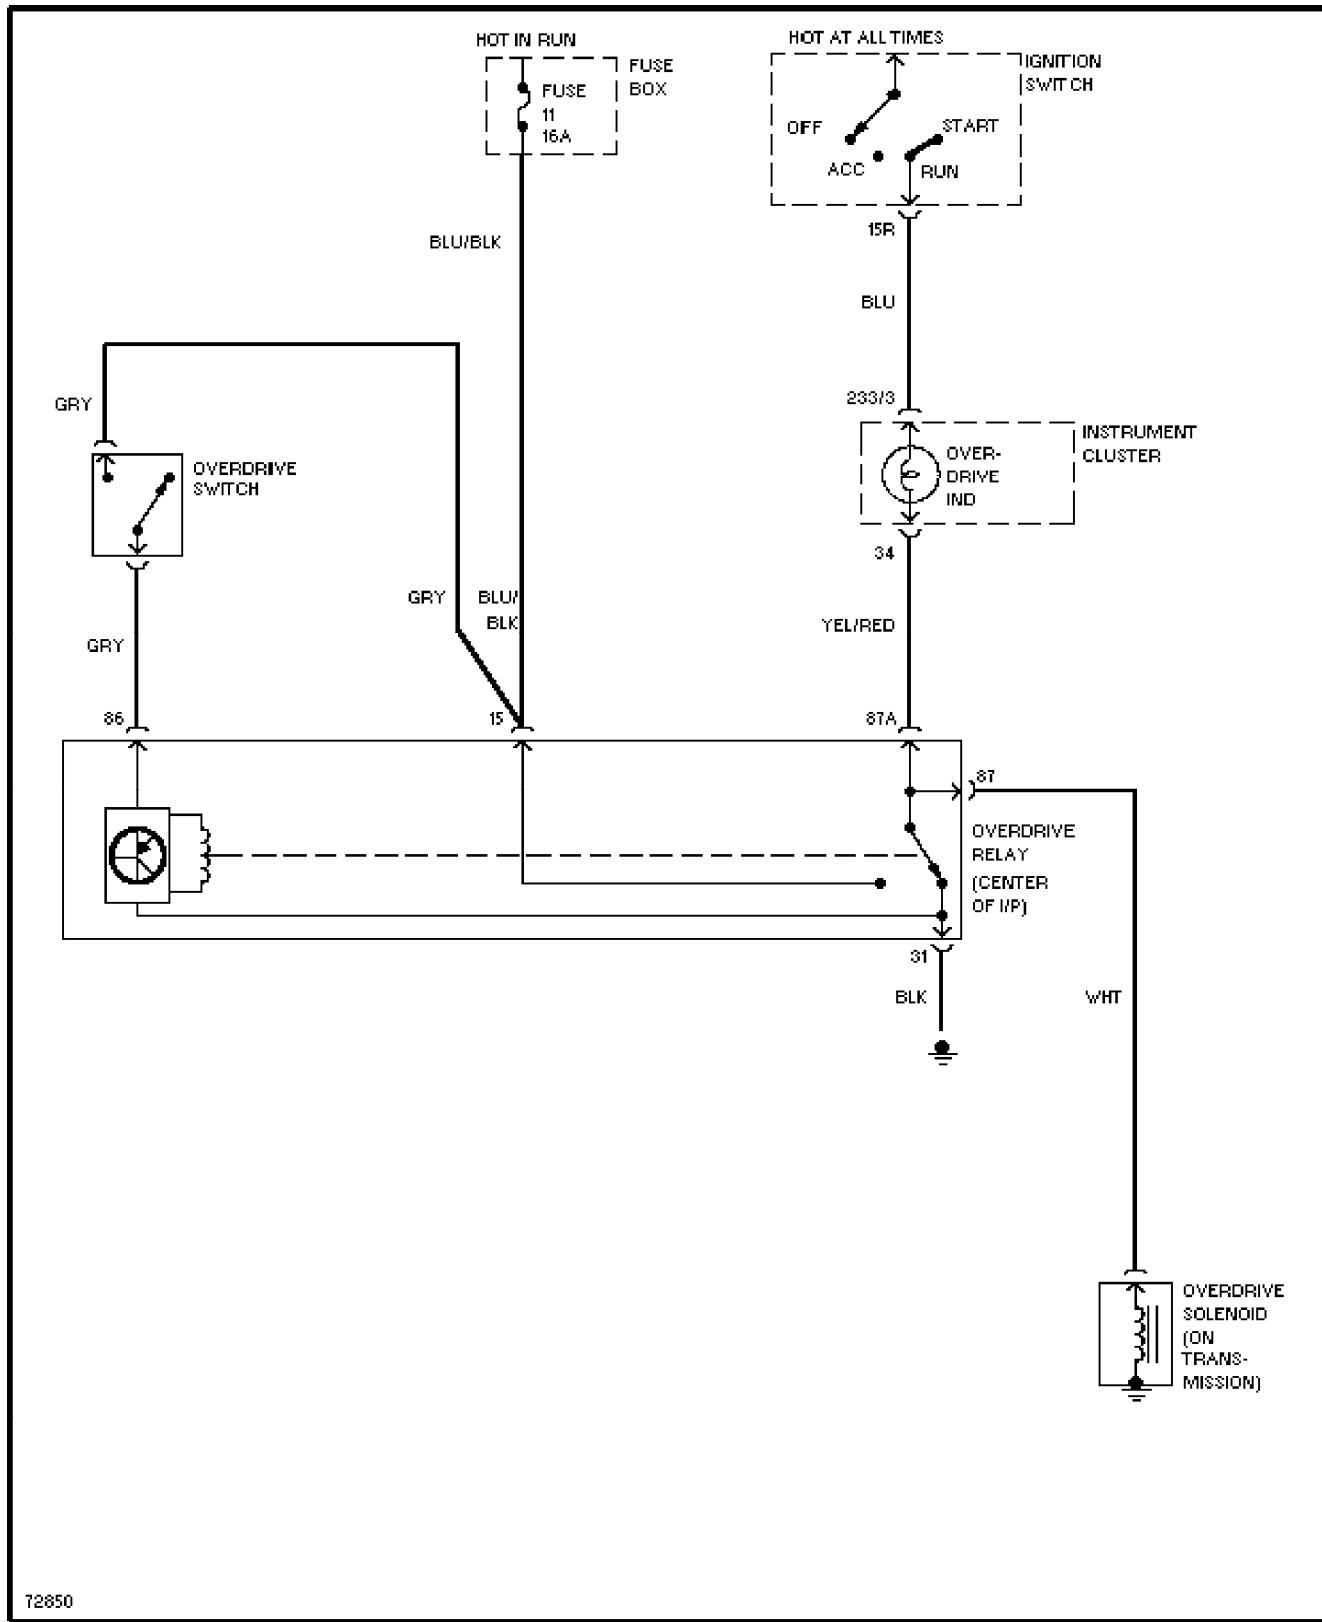


**SYSTEM WIRING DIAGRAMS**  
**Front Washer/Wiper Circuit**  
 1993 Volvo 240

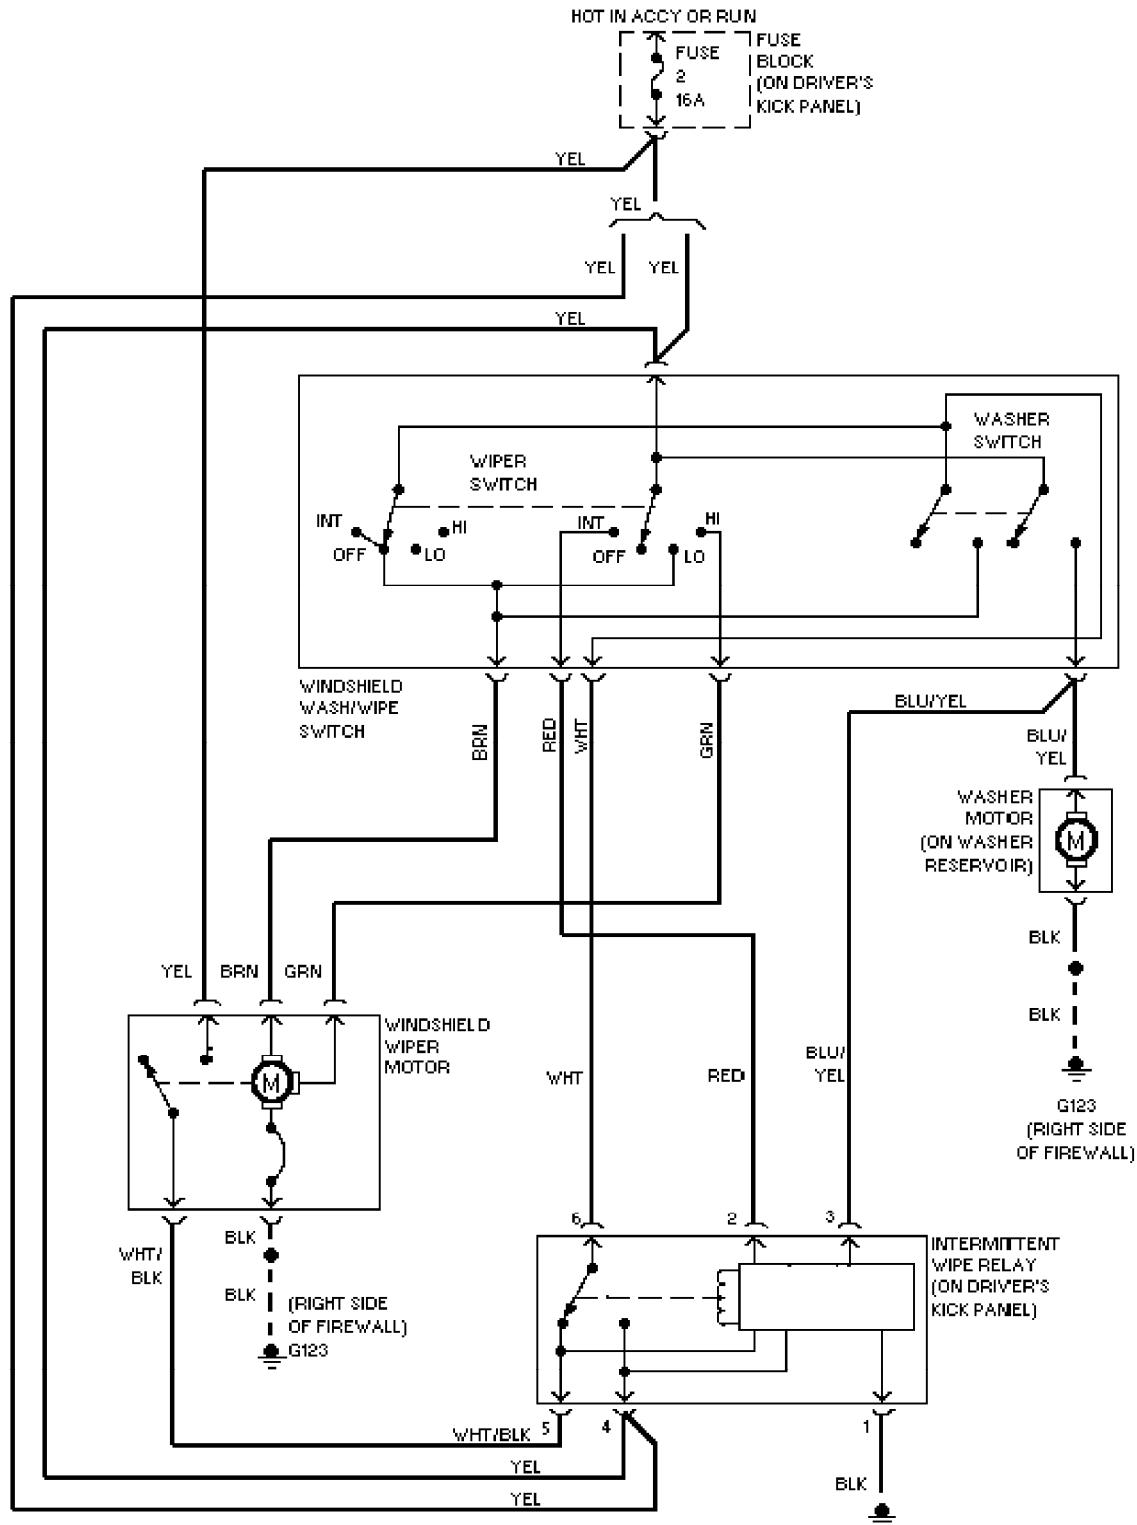

**WIRING DIAGRAMS**  
**Fig. 4: Instrument Cluster, Heater Fan Sw (Grid 12-15)**  
 1993 Volvo 240

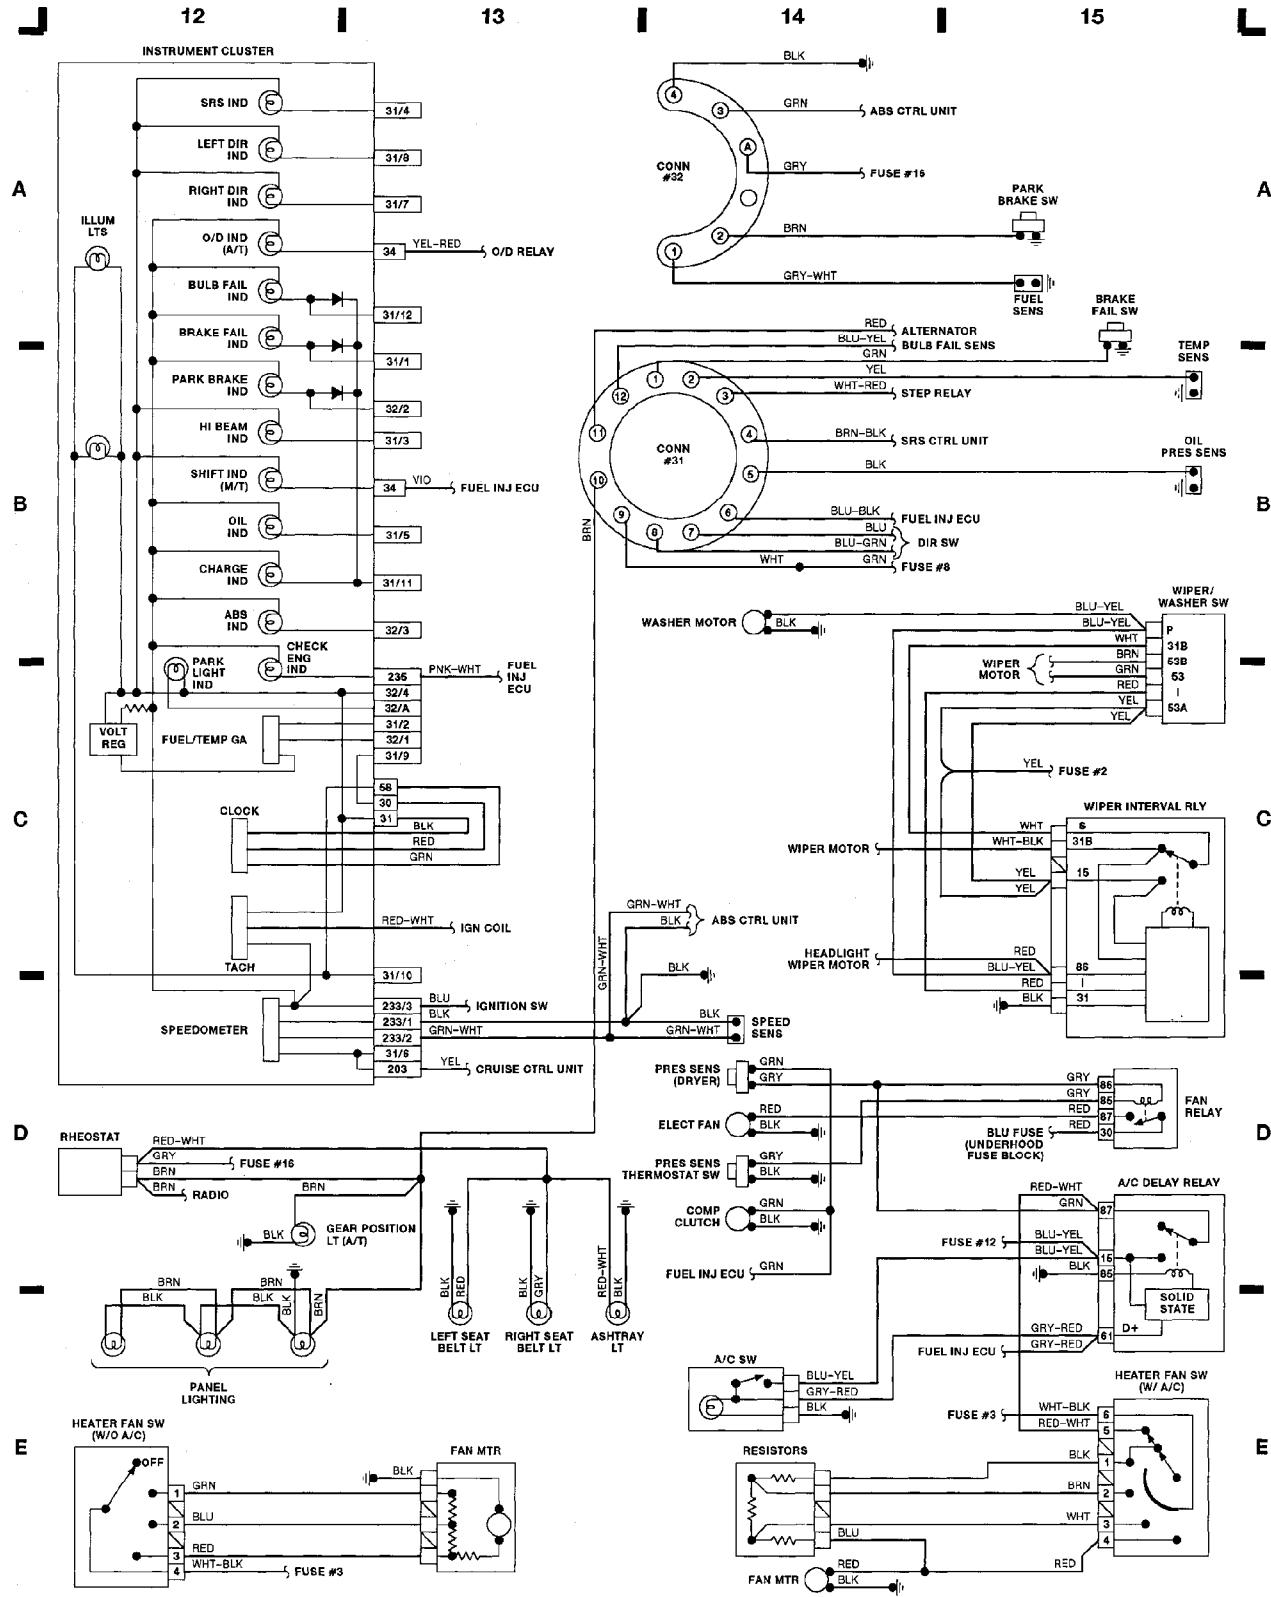

**WIRING DIAGRAMS**  
**Fig. 5: ABS Ctrl Sw, Power Window Door Sws (Grid 16-19)**  
 1993 Volvo 240

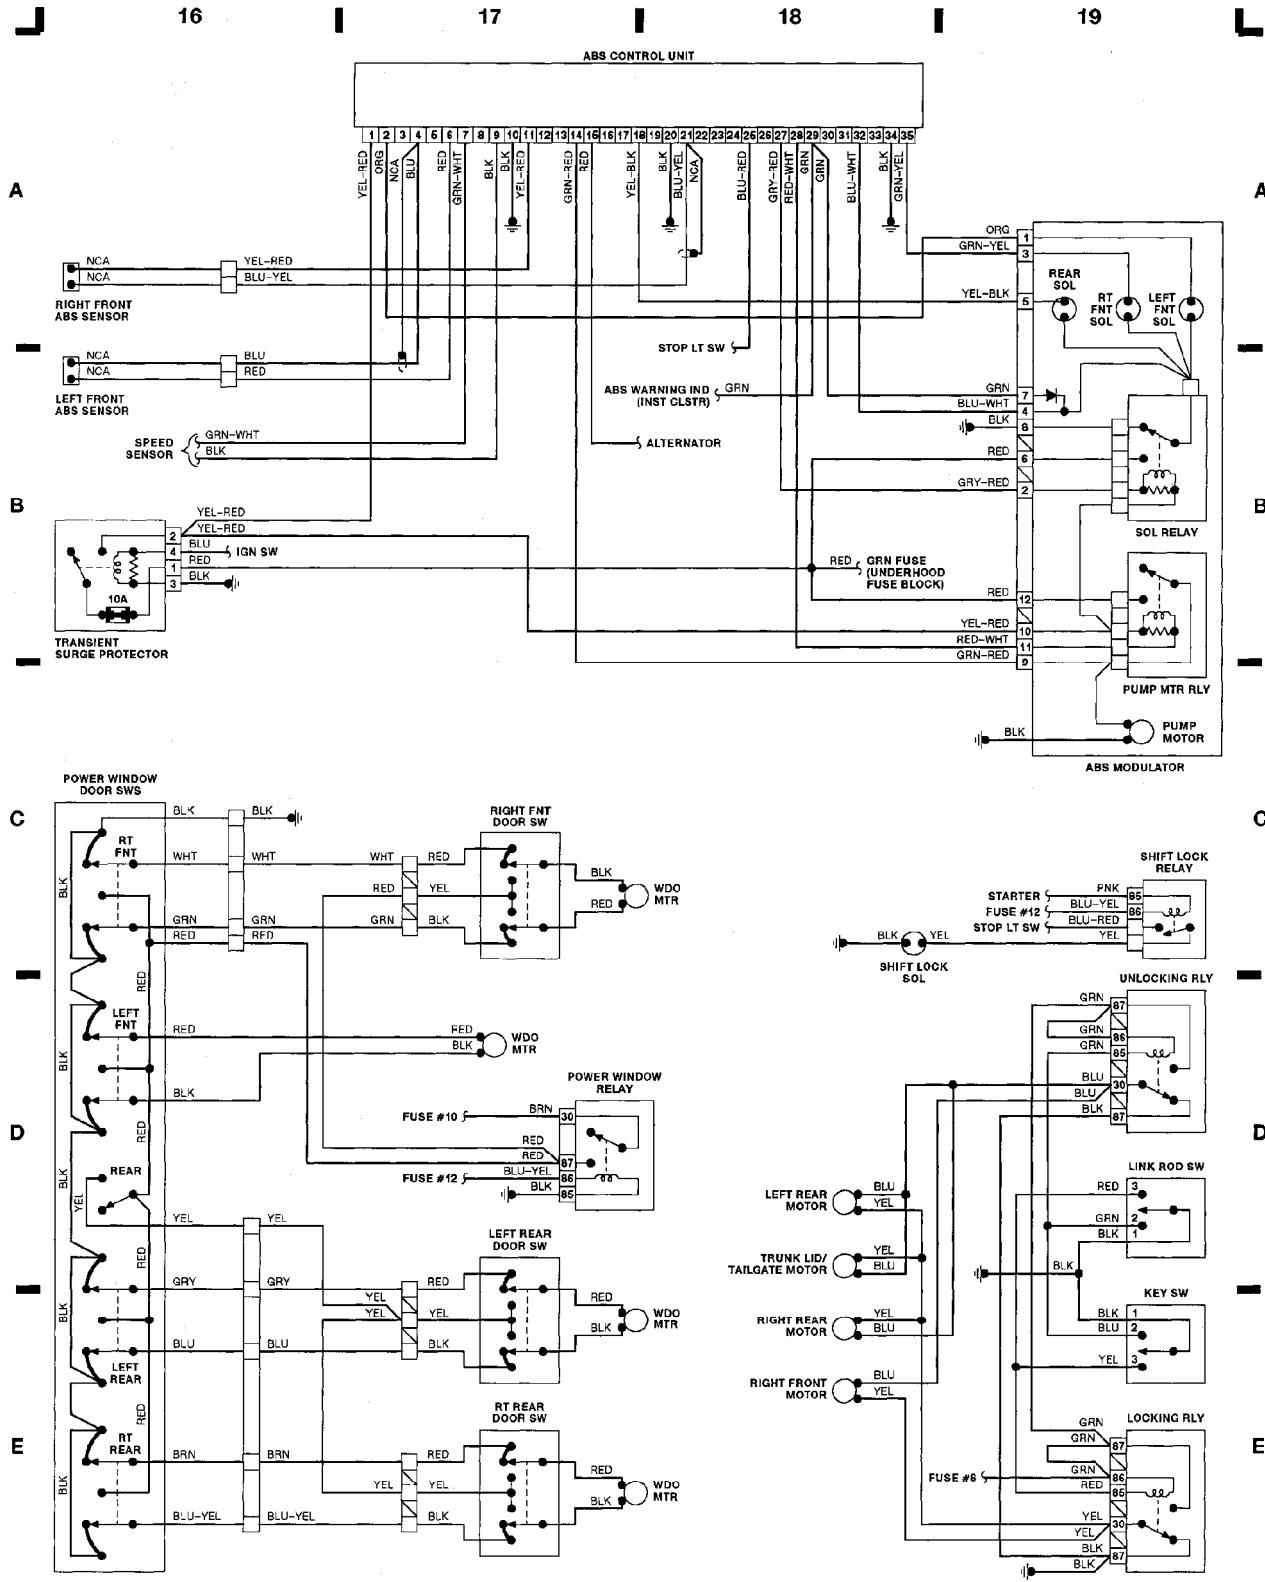

# WIRING DIAGRAMS

**Fig. 6: Taillight, Rear Wiper/Washer Sw, Defog Rly (Grid 20-23)**


1993 Volvo 240

20

21

22


23

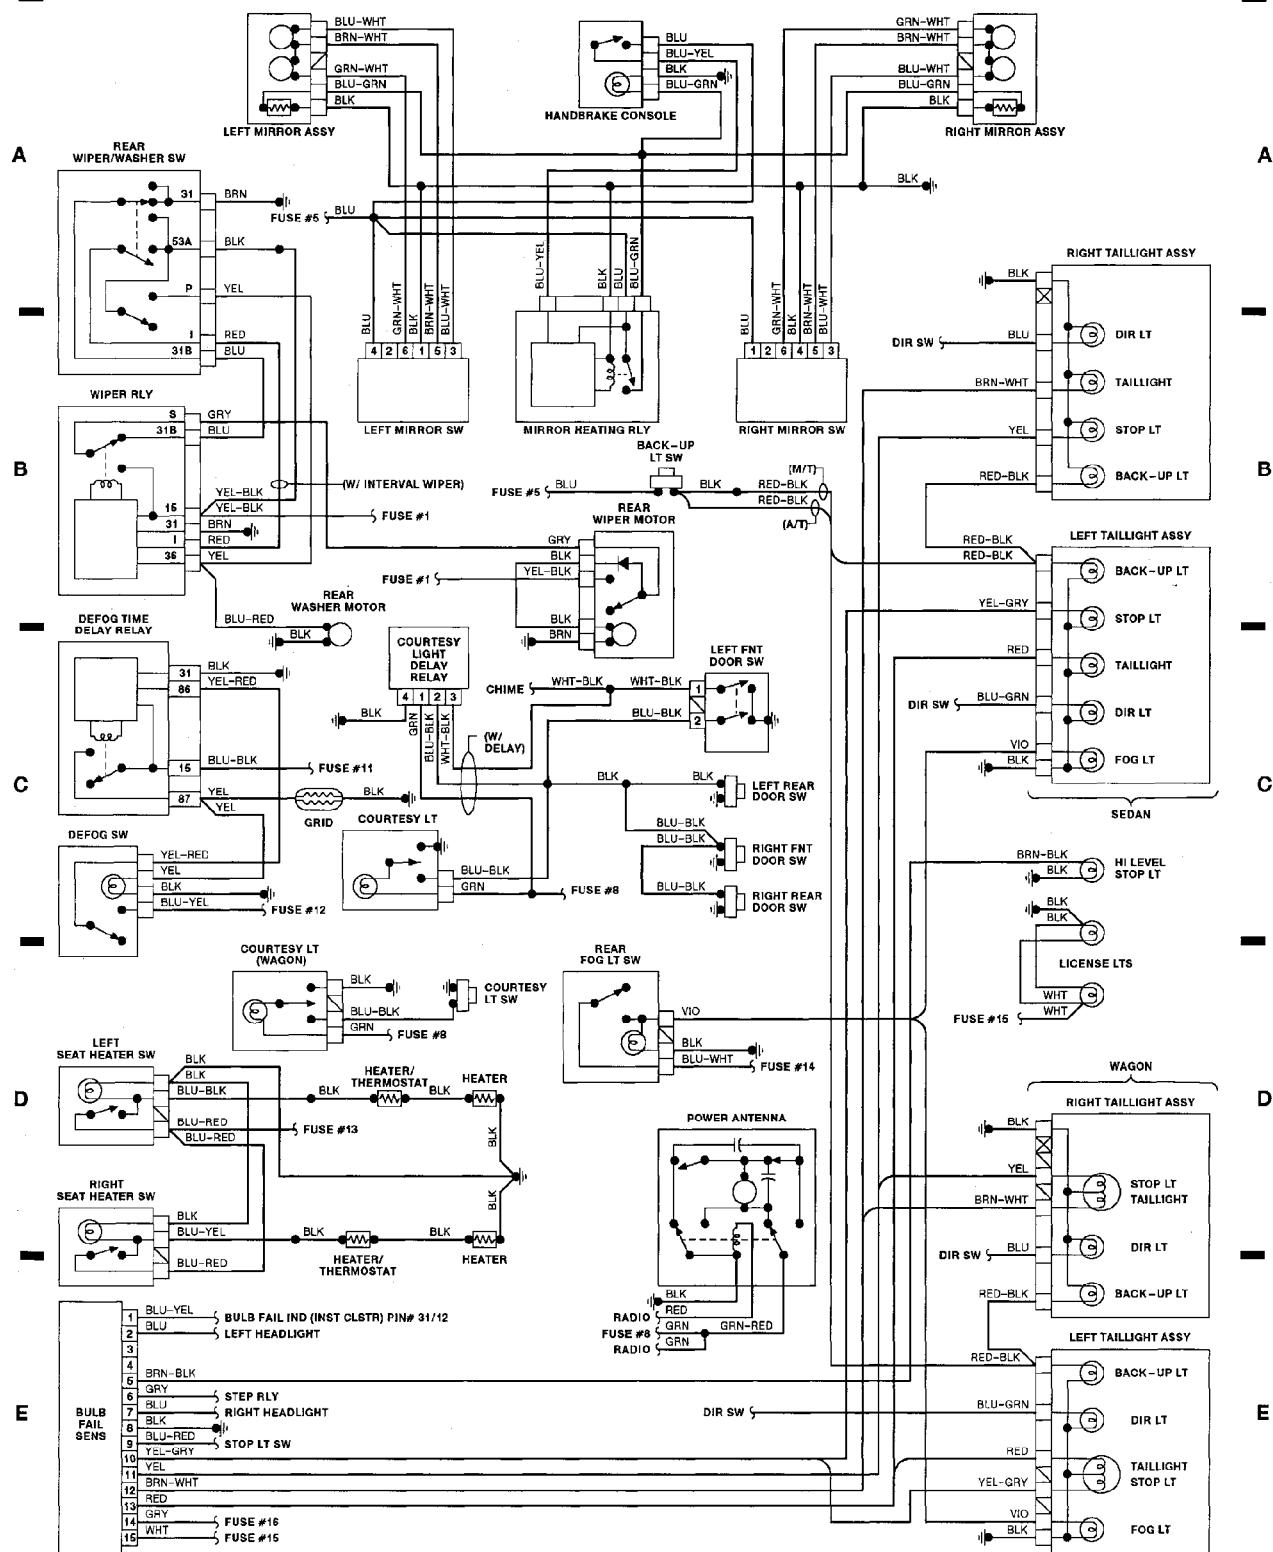


**WIRING DIAGRAMS**  
**Fig. 1: Engine Compartment, Headlights (Grid 1-3)**  
 1993 Volvo 240

**COMPONENT LOCATOR:**

|                          |                 |
|--------------------------|-----------------|
| A/C SYSTEM               | D-E 14-15       |
| ABS SYSTEM               | A-C 16-19       |
| A. TERNATOR              | B 3             |
| BACK-UP LT SW            | B 22            |
| BATTERY                  | A 1             |
| BRAKE FAIL SW            | A 15            |
| BUSSAIL SENS             | E 20            |
| C-G LTR.                 | B 11            |
| COURTESY LTS             | C-D 20-22       |
| CRUISE CTRL SYSTEM       | C-D 2-3         |
| DATA LINK CONN           | B 6             |
| DEFOG SW                 | C 20            |
| DEFROST TIME DELAY RELAY | D 20            |
| DIAGNOSTIC CONN          | D 5             |
| DIR SW                   | A 11            |
| EZK IGN SYSTEM ECU       | C-D 7           |
| FAN RELAY                | D 15            |
| FLASHER RELAY            | A-B 10          |
| FUEL PUMP (LH-JETRONIC)  | A-B 4           |
| FUEL PUMP (IN TANK)      | A 5             |
| FUEL PUMP (MAIN)         | A 4             |
| FUEL PUMP SENS           | A 15            |
| FUEL SYSTEM RELAY        | C 4             |
| FOOT BLK                 | B-E 20-10       |
| GLOVE BOX LT & SW        | D 11            |
| HAZARD SW                | A-B 11          |
| HEADLT BEAM LENGTH       |                 |
| CTRL SYSTEM              | B 2-3           |
| HEADLT RLY               | A-B 8           |
| HEAT SW                  | A 10            |
| HEADLT WIPER MOTORS      | C 1-2           |
| HEATER FAN SW/S          | E 12-15         |
| HORN SW                  | C 1             |
| IGNITION COI             | E 6             |
| IGNITION SW              | B-C 8           |
| INSTRUMENT CLUSTER       | A-C 12-14       |
| JUNCTION BLOCK           | B 1             |
| LEFT FRONT DOOR SW       | C 22            |
| O/D RELAY (A/T)          | D 4             |
| O2 SENSOR                | C 7             |
| OVERTEMP SENS            | C 15            |
| PANEL LTS                | E 12            |
| PARK BRAKE SW            | A 15            |
| POWER ANTENNA            | D-E 22          |
| POWER DOOR LOCKS         | D-E 18-19       |
| POWER MIRROR SYSTEM      | A-B 20-23       |
| POWER SEAT SYSTEM        | C-E 17          |
| REAR FOG LT SW           | D 21-22         |
| REAR WIPER/WASHER SYSTEM | A-B 20-21       |
| RHOCSTAT                 | D 12            |
| SEAT BELT LTS            | E 9, E 11, E 13 |
| SEAT BELT PRE-SYS        | D 20-21         |
| SHIFT LOCK RELAY         | D 19            |
| SPEED SENS               | D 14            |
| SRS SYSTEM               | E 4-5           |
| STARTER MOTOR            | A 3             |
| STEP RELAY               | A 8             |
| STOP LT SW               | D 2             |
| TEMP SENS                | C 15            |
| TRUNK LT SW              | C 11            |
| UNDERHOOD FUSE BLOCK     | D 8             |
| WIPER INTERVAL RLY       | C-D 15          |
| WIPER MOTOR              | E 3             |
| WIPER/WASHER SW          | B-C 15          |

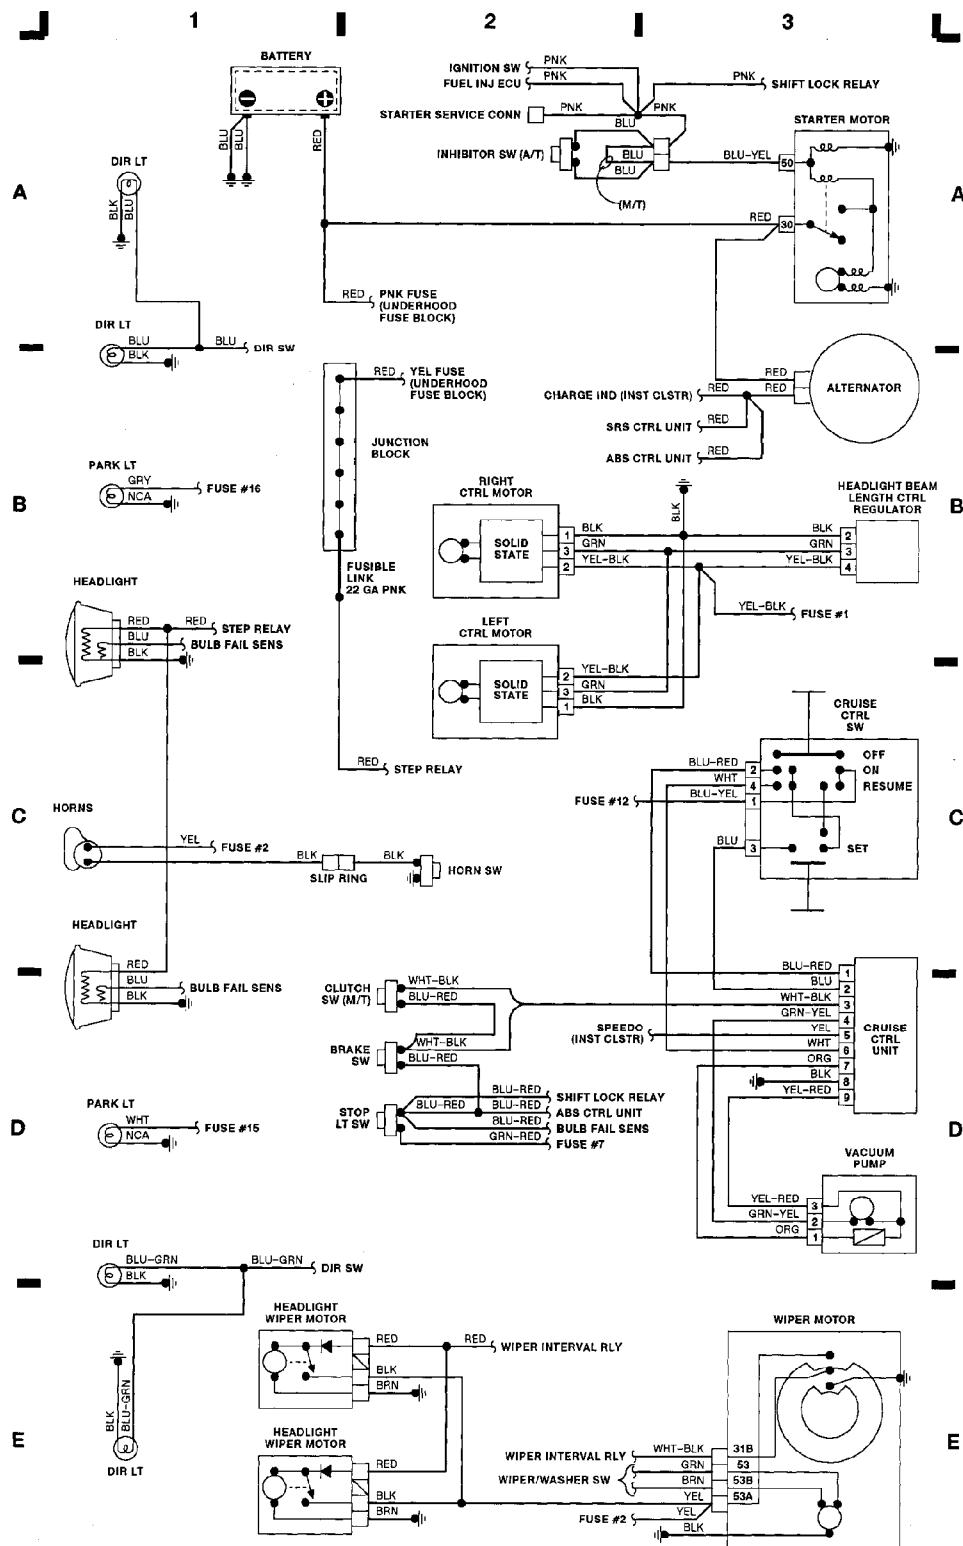

**WIRING DIAGRAMS**  
**Fig. 2: Fuel Injector ECU (LH 2.4), EZK Ign Sys Sw (Grid 4-7)**  
 1993 Volvo 240

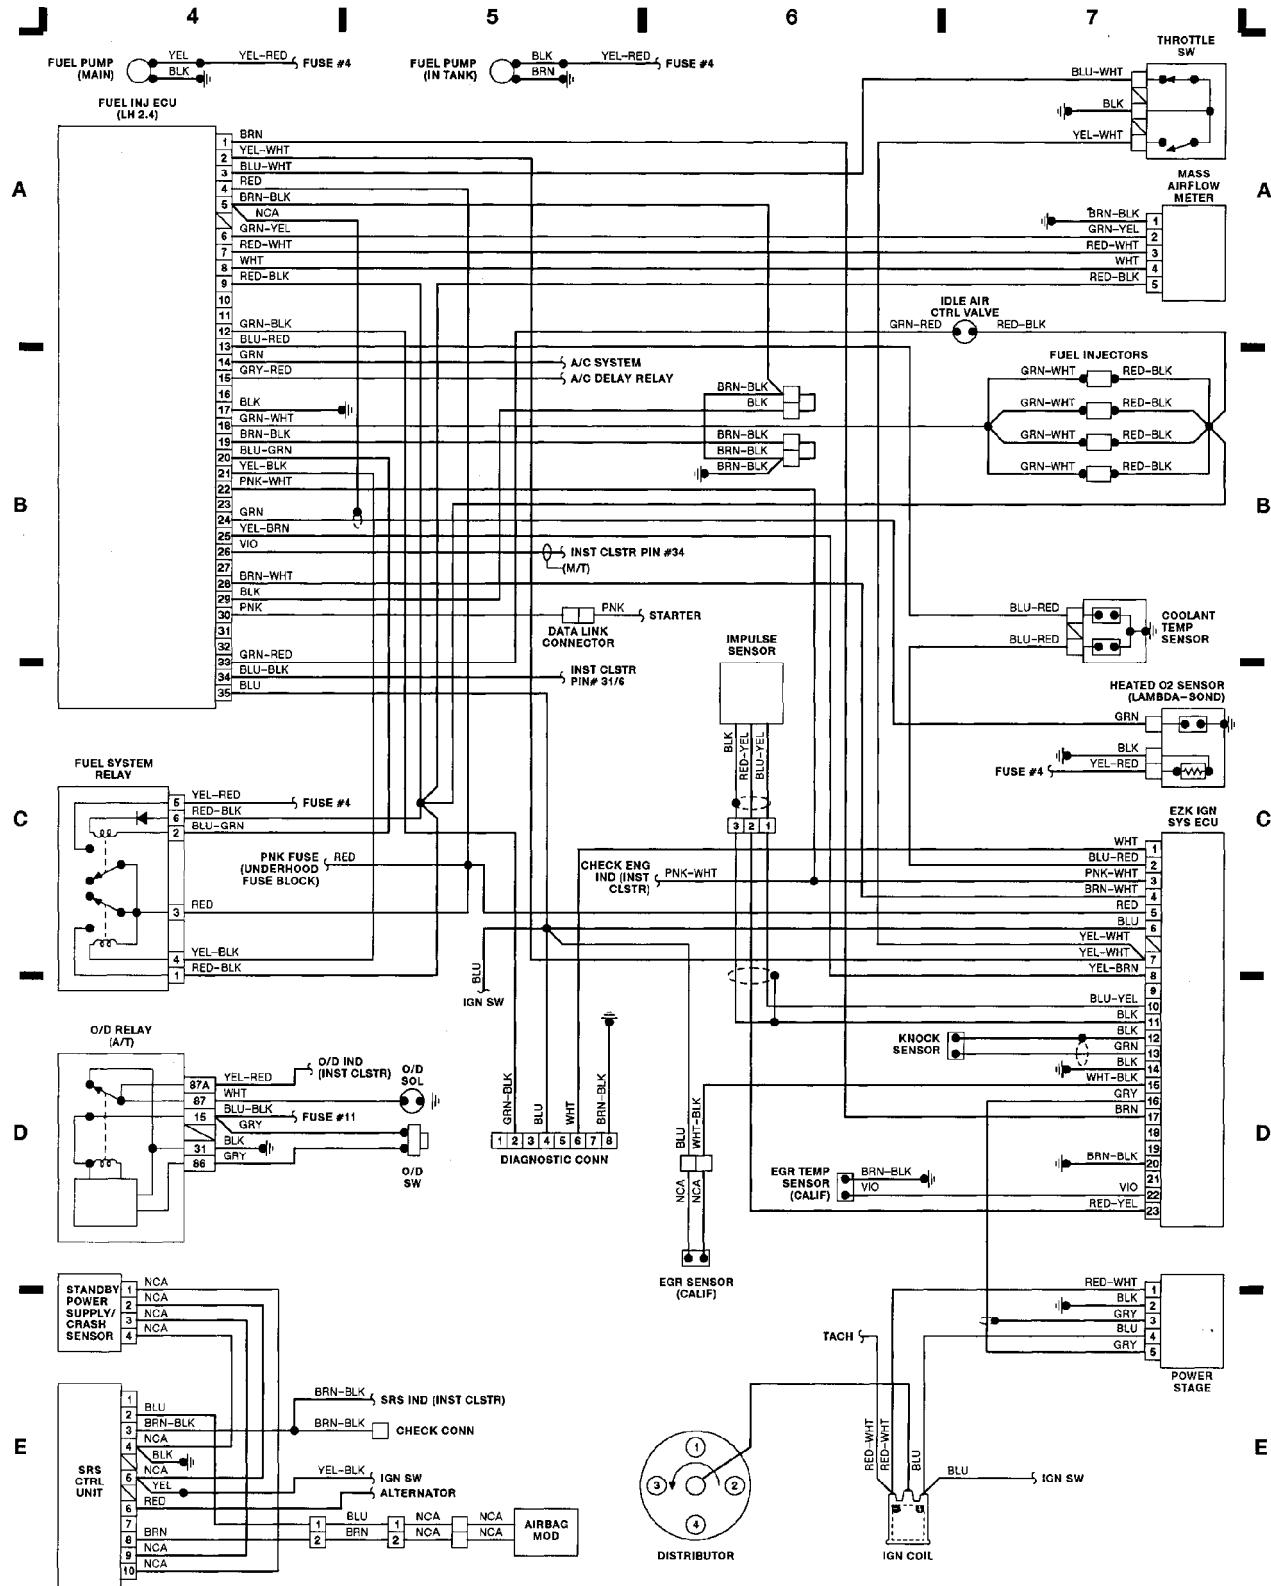

**WIRING DIAGRAMS**  
**Fig. 3: Fuse Block, Headlight Sw, Step Rly (Grid 8-11)**  
 1993 Volvo 240

